

SHARP®

LC-46XL1E

LC-46XL1S

LC-52XL1E

LC-52XL1S

LCD COLOUR TELEVISION

LCD-FARBFERNSEHGERÄT

TÉLÉVISION COULEUR À ÉCRAN

À CRISTAUX LIQUIDES (LCD)

TELEVISORE A COLORI LCD

LCD-KLEURENTELEVISIE

TELEVISIÓN EN COLOR LCD

OPERATION MANUAL

BEDIENUNGSANLEITUNG

MODE D'EMPLOI

MANUALE DI ISTRUZIONI

GEBRUIKSAANWIJZING

MANUAL DE MANEJO

ENGLISH

DEUTSCH

FRANÇAIS

ITALIANO

NEDERLANDS

ESPAÑOL

AQUOS



HD
ready

HDMI™
HIGH-DEFINITION MULTIMEDIA INTERFACE



trud
POWERED BY MICRONAS

DVB
Digital Video
Broadcasting

100Hz
DOUBLE FRAME DRIVING



SPECIAL NOTE FOR USERS IN THE U.K.

The mains lead of this product is fitted with a non-rewireable (moulded) plug incorporating a 13A fuse. Should the fuse need to be replaced, a BSI or ASTA approved BS 1362 fuse marked  or  and of the same rating as above, which is also indicated on the pin face of the plug, must be used.

Always refit the fuse cover after replacing the fuse. Never use the plug without the fuse cover fitted.

In the unlikely event of the socket outlet in your home not being compatible with the plug supplied, cut off the mains plug and fit an appropriate type.

DANGER:

The fuse from the cut-off plug should be removed and the cut-off plug destroyed immediately and disposed of in a safe manner.

Under no circumstances should the cut-off plug be inserted elsewhere into a 13A socket outlet, as a serious electric shock may occur.

To fit an appropriate plug to the mains lead, follow the instructions below:

IMPORTANT:

The wires in the mains lead are coloured in accordance with the following code:

Blue: Neutral

Brown: Live

As the colours of the wires in the mains lead of this product may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

- The wire which is coloured blue must be connected to the plug terminal which is marked N or coloured black.
- The wire which is coloured brown must be connected to the plug terminal which is marked L or coloured red.

Ensure that neither the brown nor the blue wire is connected to the earth terminal in your three-pin plug.

Before replacing the plug cover make sure that:

- If the new fitted plug contains a fuse, its value is the same as that removed from the cut-off plug.
- The cord grip is clamped over the sheath of the mains lead, and not simply over the lead wires.

IF YOU HAVE ANY DOUBT, CONSULT A QUALIFIED ELECTRICIAN.

- The illustrations and on-screen displays in this operation manual are for explanation purposes and may vary slightly from the actual operations.
- The examples used throughout this manual are based on the LC-52XL1E model.

Contents



Contents	1	Supply voltage.....	19
Dear SHARP customer	2	AV-Link (EXT 2 only)	19
Important Safety Precautions	2	Miscellaneous.....	19
Trademarks	2	Setup menu	19
Supplied accessories	3	AQUOS LINK Auto Power On.....	19
Quick guide	3	Channels	19
Attaching the stand.....	3	Child lock.....	20
Setting the TV	4	Auto format	20
TV (Front view)	5	Language	20
TV (Rear view)	5	Blue illumination setting	20
Inserting the batteries.....	6	Factory settings	20
Using the remote control unit	6	Miscellaneous	21
Cautions regarding the remote control unit	6	Geometry menu	21
Remote control unit	7	Picture horizontal	21
Turning on the power.....	8	Picture vertical	21
Standby mode	8	Phase position.....	21
Initial auto installation (Analogue).....	8	Other menu items	22
Initial auto installation (DTV).....	8	AV mode	22
Channel selection using the station list (Analogue).....	9	Status display	22
Using $\frac{1}{2}/\frac{1}{4}$ on the remote control unit.....	9	INPUT SOURCE	22
Using external equipment	10	Still image	22
Connecting a VCR	10	OPC	22
Connecting a game console or camcorder.....	10	Wide modes	23
Connecting a DVD player	10	Analogue teletext	24
Connecting a decoder	11	Using analogue teletext menu	24
Connecting a PC	11	Newsflash.....	24
HDMI connection.....	11	Reveal/Conceal	24
Controlling HDMI device using AQUOS LINK	12	Setup.....	25
Connecting HDMI device to TV	12	DTV menu operations	26
AQUOS LINK Auto Power On	13	DTV menu operation buttons	26
Operating AQUOS LINK device.....	13	DTV On-Screen Display	26
Listening with AQUOS Audio speaker system	13	DTV common operations	26
Manually changing AQUOS Audio speaker system's sound mode	13	About using the character set screen.....	27
Playback of titles using AQUOS LINK	14	Language.....	27
Selecting media type for CEC-compatible recorder.....	14	Programme Setup	27
HDMI device selection	14	Favourite.....	28
Recording via AQUOS Recorder EPG (only for recorder)	14	Lock	28
Using AV Link function	14	Move	28
Menu operations	15	Move To	28
On-Screen Display	15	Skip	28
Common operations	15	Select	29
Menu operation without a remote control.....	15	Erase.....	29
Picture menu	16	Label	29
Backlight	16	View	29
Contrast	16	Installation.....	29
Brightness	16	Auto Installation	29
Colour	16	Carrier Scan.....	29
Tint.....	16	Carrier Setup	30
Sharpness	16	System Setup	30
Red	16	OSD Setup	30
Green	16	Child Lock	31
Blue	16	Accessories	31
Colour temp.	16	Software Version.....	31
Black.....	16	Software Upgrade.....	31
3D-Y/C.....	16	Common Interface	32
DNR (Digital Noise Reduction).....	16	Inserting a CA card	32
I/P setting	16	Supplying power to the antenna.....	32
Film mode.....	17	About EPG.....	33
truD(R).....	17	Using the EPG.....	33
100Hz.....	17	Using the EPG Timer	33
Reset.....	17	Using the digital programme list	34
Sound menu	17	Viewing a service banner.....	34
Treble	17	Using the multi audio function	35
Bass.....	17	Displaying subtitles	35
Loudness.....	17	Using the MHEG5 application (UK only)	35
Auto volume	17	Appendix	36
Balance	17	Troubleshooting.....	36
Clear voice.....	17	Using universal remote control	37
Reset.....	17	PC compatibility chart.....	41
Connections menu.....	18	RS-232C port specifications	41
Decoder	18	Specifications	43
Input select	18	Optional accessories.....	43
HDMI setup	18	End of life disposal.....	44

Dear SHARP customer

Thank you for your purchase of the SHARP LCD colour TV product. To ensure safety and many years of trouble-free operation of your product, please read the Important Safety Precautions carefully before using this product.

Important Safety Precautions

- Cleaning—Unplug the AC cord from the AC outlet before cleaning the product. Use a damp cloth to clean the product. Do not use liquid cleaners or aerosol cleaners.
- Water and moisture—Do not use the product near water, such as bathtub, washbasin, kitchen sink, laundry tub, swimming pool and in a wet basement.
- Do not place vases or any other water-filled containers on this product.
The water may spill onto the product causing fire or electric shock.
- Stand—Do not place the product on an unstable cart, stand, tripod or table. Doing so can cause the product to fall, resulting in serious personal injuries as well as damage to the product. Use only a cart, stand, tripod, bracket or table recommended by the manufacturer or sold with the product. When mounting the product on a wall, be sure to follow the manufacturer's instructions. Use only the mounting hardware recommended by the manufacturer.
- When relocating the product placed on a cart, it must be moved with utmost care. Sudden stops, excessive force and uneven floor surface can cause the product to fall from the cart.
- Ventilation—The vents and other openings in the cabinet are designed for ventilation. Do not cover or block these vents and openings since insufficient ventilation can cause overheating and/or shorten the life of the product. Do not place the product on a bed, sofa, rug or other similar surface, since they can block ventilation openings. This product is not designed for built-in installation; do not place the product in an enclosed place such as a bookcase or rack, unless proper ventilation is provided or the manufacturer's instructions are followed.
- The LCD panel used in this product is made of glass. Therefore, it can break when the product is dropped or impact applied. If the LCD panel is broken, be careful not to be injured by broken glass.
- Heat sources—Keep the product away from heat sources such as radiators, heaters, stoves and other heat-generating products (including amplifiers).
- To prevent fire, never place any type of candle or naked flames on the top or near the TV set.
- To prevent fire or shock hazard, do not place the AC cord under the TV set or other heavy items.
- Do not display a still picture for a long time, as this could cause an afterimage to remain.
- There is power consumption always if main plug is connected.
- Servicing—Do not attempt to service the product yourself. Removing covers can expose you to high voltage and other dangerous conditions. Request a qualified person to perform servicing.

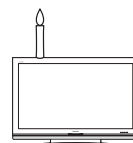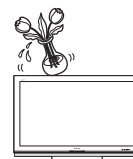

The LCD panel is a very high technology product, giving you fine picture details. Due to the very large number of pixels, occasionally a few non-active pixels may appear on the screen as a fixed point of blue, green or red. This is within product specifications and does not constitute a fault.

Precautions when transporting the TV

When transporting the TV, never carry it by holding onto the speakers. Be sure to always carry the TV by two people holding it with two hands — one hand on each side of the TV.


 

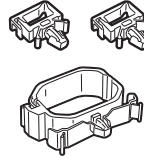
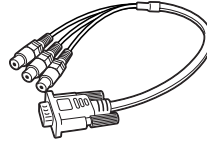
WARNING:

This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

Trademarks

- "HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC."
- truD is a registered trademark of Micronas in Germany and other countries.
- The "HD ready" Logo is a trademark of EICTA.
- The DVB logo is the registered trademark of the Digital Video Broadcasting - DVB - project.

Supplied accessories

<p>AC cord (× 1)</p> <p>(For Europe, except U.K. and Eire) (For U.K. and Eire)</p>  <p>U.K. type 3-pin AC cord is only included with models LC-46XL1E, LC-52XL1E.</p> <p>Page 4</p>	<p>Cable tie (× 1)</p>  <p>Page 4</p>	<p>Stand unit (× 1)</p>  <p>Page 3</p>	<p>Cable clamp (Small × 2, Large × 1)</p>  <p>Page 4</p>	<p>3 RCA to 15-pin D-sub adapter (× 1)</p>  <p>Page 10</p>
---	--	--	---	---

- “AAA” size battery (× 2).....Page 6
- Remote control unit (× 1).....Pages 6 and 7
- Operation manual (This publication)

Quick guide

Attaching the stand


Before performing work spread cushioning over the base area to lay the TV on, making sure the area is completely flat. This will prevent it from being damaged.

Before attaching (or detaching) stand, unplug the AC cord from the AC INPUT terminal.

CAUTION


- **Attach the stand in the correct direction.**
- **Be sure to follow the instructions. Incorrect installation of the stand may result in the TV falling over.**

- 1 Confirm that there are 10 screws (6 short screws and 4 long screws) supplied with the TV.

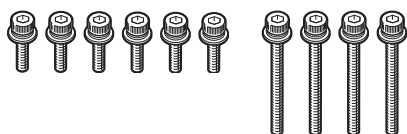


- 2 Attach the two supporting posts for the stand unit onto the base using the box for the stand unit as shown below.

(Close-up of the upper side of the stand unit)

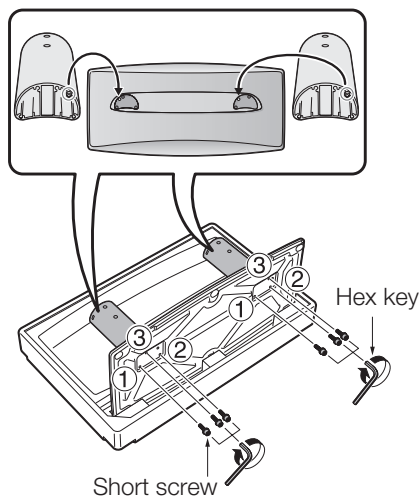

- 3
 - ① Insert the stand into the openings on the bottom of the TV.
 - ② Insert and tighten the 4 long screws into the 4 holes on the rear of the TV.

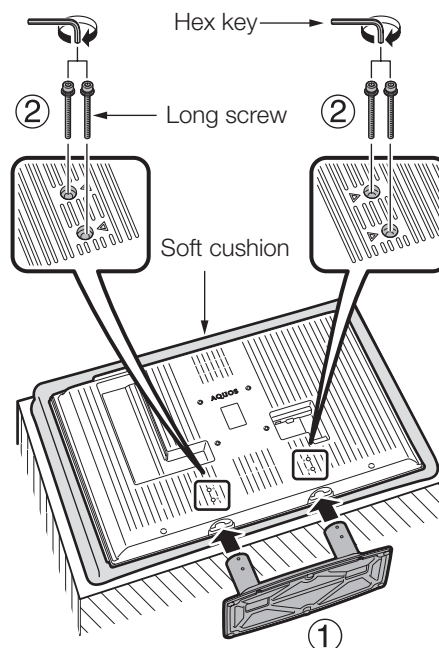


NOTE

- To detach the stand, perform the above steps in reverse order.

- 1 Insert each of the protrusions on the two supporting posts into the openings on the upper side of the base.
- 2 Insert and tighten the 6 short screws with the hex key (supplied with the product) in the order of ①, ② and ③.

Setting the TV

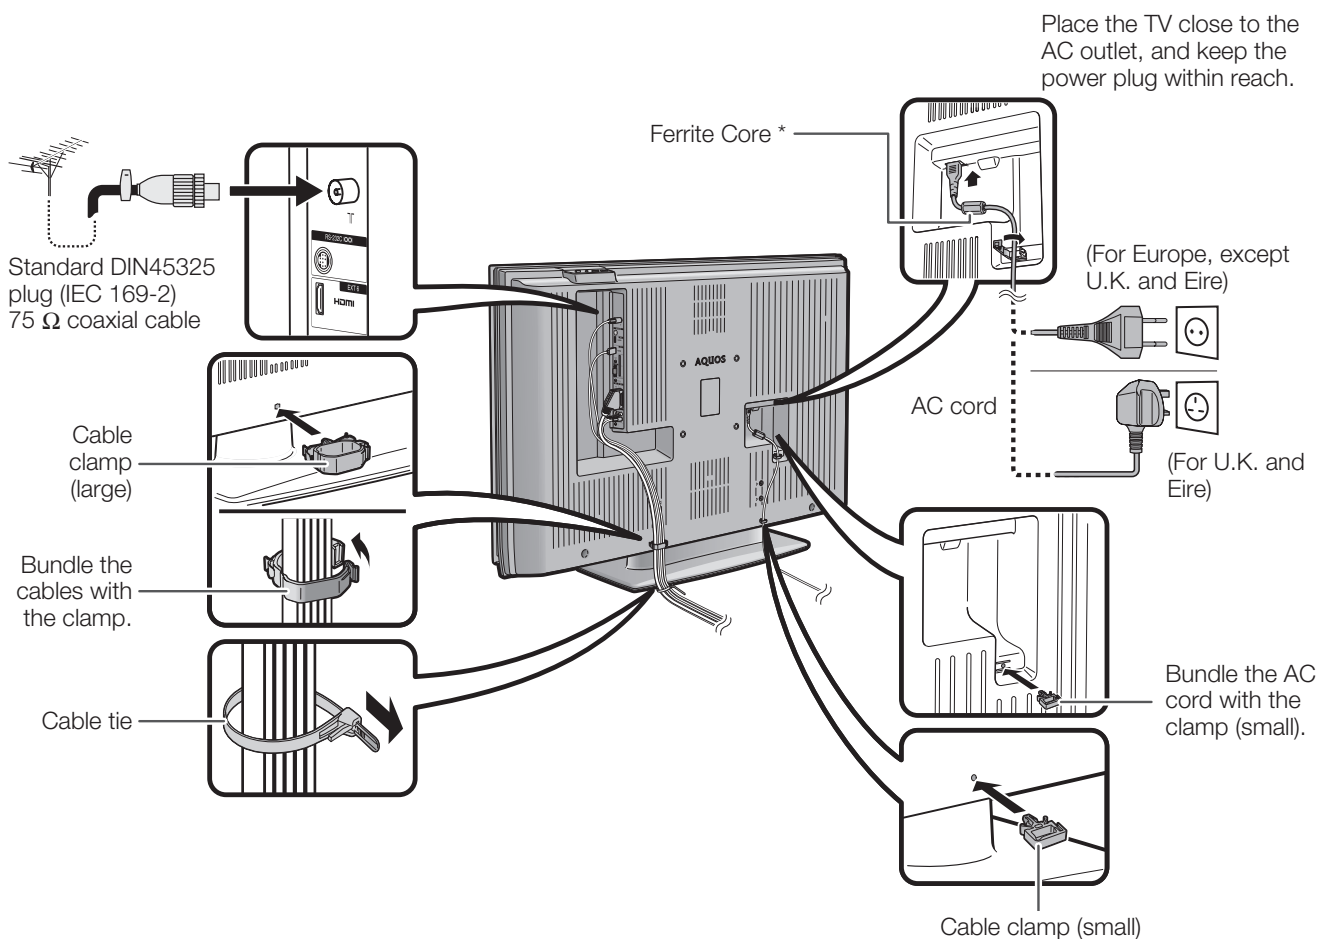

Antenna

Connect the antenna cable from your antenna-/cable socket or the (room-/roof) antenna for antenna input terminal on the back of your TV set to receive digitally/terrestrially broadcast stations.

An indoor antenna can also be used under good reception conditions. Passive and active room antennas are offered commercially. In an active antenna its power is supplied via the antenna input terminal.

The supply voltage (5V) must be correspondingly set under "Supply voltage". (Page 19)



* Ferrite Core

The Ferrite Core should be permanently attached and never removed from the AC cord.




Setting the TV on the wall

- This TV should be mounted on the wall only with the wall mount bracket available from SHARP. (See page 43.) The use of other wall mount brackets may result in an unstable installation and may cause serious injuries.
- Installing the LCD Colour TV requires special skill that should only be performed by qualified service personnel. Customers should not attempt to do the work themselves. SHARP bears no responsibility for improper mounting or mounting that results in accident or injury.
- You can ask a qualified service personnel about using an optional bracket to mount the TV to the wall.

TV (Front view)

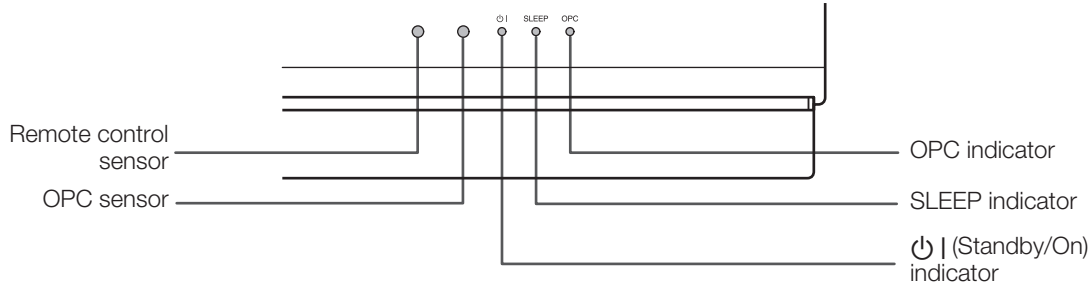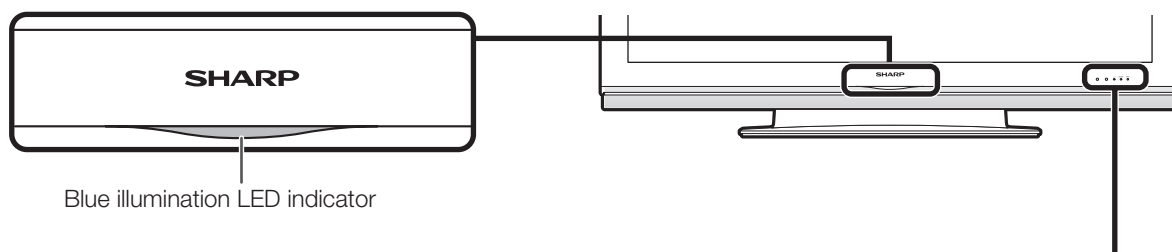


TV (Rear view)

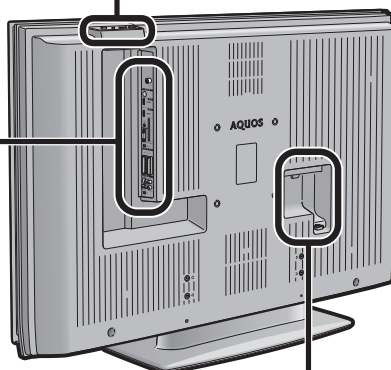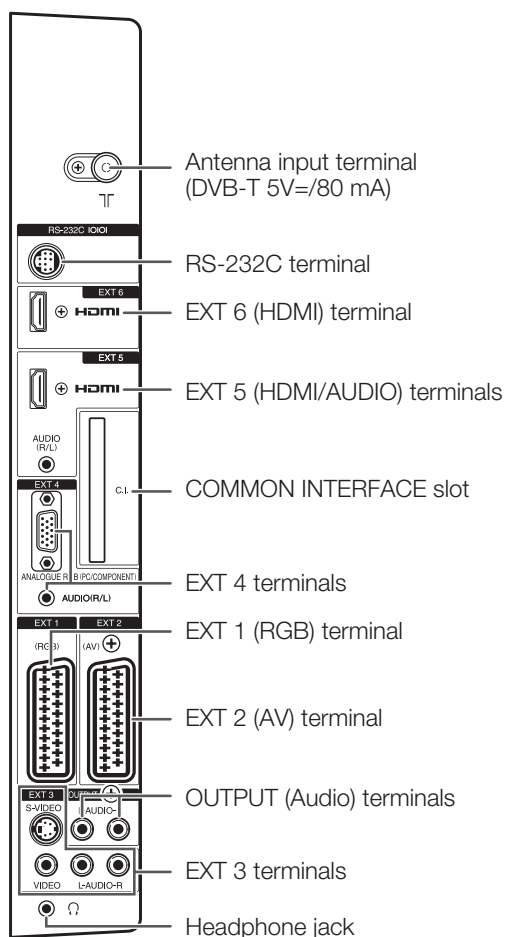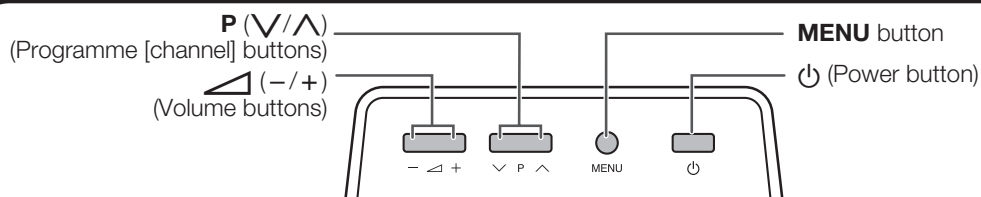

NOTE

- Only if you use an active terrestrial antenna, select "yes (5V)" under "Supply voltage". (Page 19)

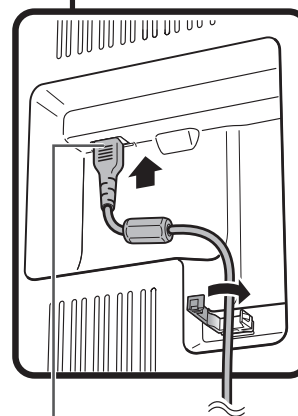


AC INPUT terminal

Quick guide

Inserting the batteries

Before using the TV for the first time, insert two “AAA” size batteries (supplied). When the batteries become depleted and the remote control unit fails to operate, replace the batteries with new “AAA” size batteries.

- 1 Press and slide the battery cover to open it.
- 2 Insert two supplied “AAA” size batteries.
 - Place batteries with their terminals corresponding to the (+) and (–) indications in the battery compartment.
- 3 Close the battery cover.

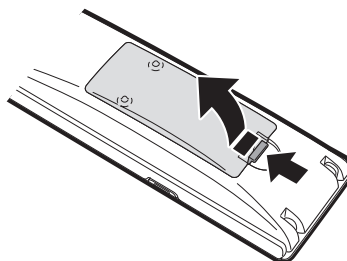


CAUTION

Improper use of batteries can result in chemical leakage or explosion. Be sure to follow the instructions below.


- Do not mix batteries of different types. Different types of batteries have different characteristics.
- Do not mix old and new batteries. Mixing old and new batteries can shorten the life of new batteries or cause chemical leakage in old batteries.
- Remove batteries as soon as they have worn out. Chemicals that leak from batteries can cause a rash. If you find any chemical leakage, wipe thoroughly with a cloth.
- When replacing the batteries, use alkaline batteries instead of manganese ones.
- Do not overuse the light-up function by using **LIGHT** button, doing so may shorten the battery life. Replace the batteries when the light on LCD window or light-up function become weak or blurry.
- Do not continue to use the remote control unit with batteries running low. This may result in error message or malfunction. Should this happen replace the batteries and leave it unused for a while. Otherwise, you may open the rear battery cover and press the **RESET** button. When you press the **RESET** button, your Universal remote control settings will be deleted.
- The remote control unit has a internal memory of external devices. In order not to lose the data, replace the batteries quickly. If the manufacturer code is initialised and lost, you can input the manufacturer code again. (See page 37.)
- The batteries supplied with this product may have a shorter life expectancy due to storage conditions.
- If you will not be using the remote control unit for an extended period of time, remove the batteries from it.

RESET button

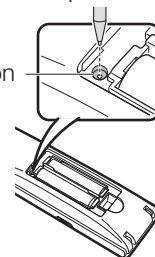


Using the remote control unit

Use the remote control unit by pointing it towards the remote control sensor. Objects between the remote control unit and sensor may prevent proper operation.

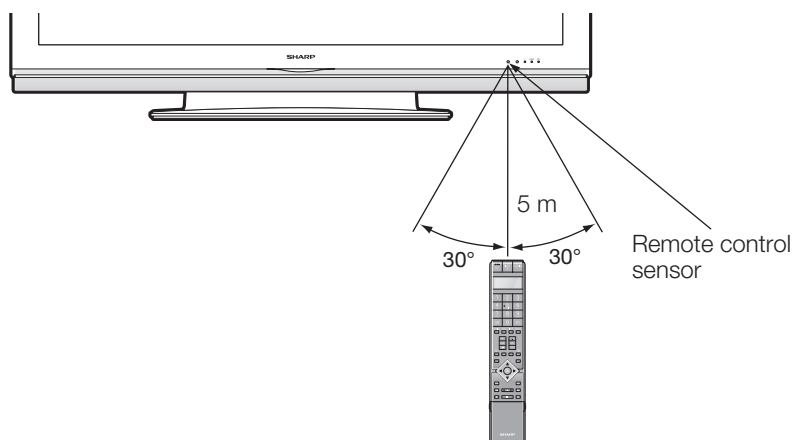

Cautions regarding the remote control unit

- Do not expose the remote control unit to shock. In addition, do not expose the remote control unit to liquids, and do not place in an area with high humidity.
- Do not install or place the remote control unit under direct sunlight. The heat may cause deformation of the unit.
- The remote control unit may not work properly if the remote control sensor of the TV is under direct sunlight or strong lighting. In such case, change the angle of the lighting or TV, or operate the remote control unit closer to the remote control sensor.

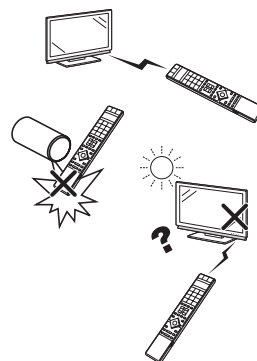


Remote control unit

NOTE

- The symbols **DVD**, **STB** and **VCR** indicate that the buttons become available in respective operating mode when using as a universal remote control.

- 1 **TV Standby/On** **DVD STB VCR**
(Page 8)
- 2 **LIGHT** **DVD STB VCR**
When pressed buttons that are frequently used (**P** **^**/**v**, **Δ** **+/-**, **0-9** numeric buttons, **↶** and **↷**) will light. The lighting will turn off if no operations are performed within about 5 seconds. This button is used for performing operations in low-light situations.
- 3 **FUNCTION** **DVD STB VCR**
Press this button briefly (for more than 0.2 second), and the remote control switches for DVD, SetTopBox or VCR operation and currently controlled device will be indicated in the LCD window. See page 37 for how to use this unit as a universal remote control.
- 4 **LCD window** **DVD STB VCR**
This screen shows which device you are currently controlling. (TV, DVD, STB or VCR).
- 5 **0-9** **STB**
Set the channel in TV and DTV mode. Enter the desired numbers or letters. Set the page in Teletext mode.
- 6 **↶ (Flashback)**
Press to return to the previous image in normal viewing mode.
- 7 **DTV MENU**
DTV: Display DTV Menu screen.
- 8 **DTV**
Press to access DTV mode while watching other input sources, and vice versa.
(Will not work if you were watching DTV immediately before turning off the TV. In this case first select any other input source except DTV using the **→** button.)
- 9 **Δ (+/-) (Volume)** **DVD STB VCR**
Increase/decrease TV volume.
- 10 **⊗ (Mute)** **DVD STB VCR**
TV sound on/off
- 11 **Colour (Red/Green/Yellow/Blue)**
TELETEXT: Select a page. (Page 25)
The coloured buttons are used to select correspondingly to the coloured items in the menu screen.
- 12 **▲/▼/◀/▶ (Cursor)** **DVD**
Select a desired item on the setting screen.
OK **DVD STB**
TV/DTV/DVD/STB: Execute a command within the menu screen.
TV/DTV: Display the station list in analogue mode and the programme list in DTV mode.
- 13 **END**
Exit the menu screen.

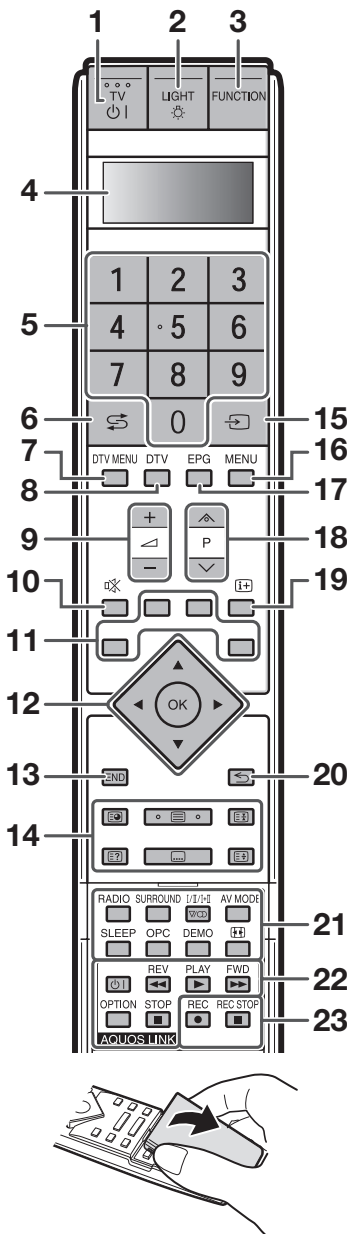

14 Buttons for teletext

- ⌂ (Subpage)**
(Page 25)
- ≡ (Teletext)**
TV: Display the analogue teletext. (Page 24)
DTV: Select DTV data broadcasting and TELETEXT. (Page 35)
- ⏸ (Freeze/Hold)**
(Page 25)
- ⌂ (Reveal hidden Teletext)**
(Pages 24 and 25)
- ⋮ (Subtitle for Teletext)**
TV/External: Subtitle on/off. (Page 25)
DTV: Display the subtitle selection screen. (Page 35)
- ⏮ (Top/Bottom/Full)**
Set the area of magnification in analogue teletext mode. (Page 25)

 
- 15 **→ (INPUT SOURCE)**
Select an input source.
(TV, DTV, EXT1, EXT2, EXT3, EXT4, EXT5, EXT6) (Page 22)
- 16 **MENU** **DVD**
TV: MENU screen on/off. (Page 15)
DVD: Title menu on/off.
- 17 **EPG**
DTV: To display EPG (Electronic Programme Guide) screen.
- 18 **P (^/v)** **DVD STB VCR**
Select the TV channel.
In analogue TV mode, external input sources (EXT 1 - 6) can also be selected.
- 19 **Ⓜ (Display information)**
(Pages 21, 22, 33 and 34)
- 20 **↶ (Return)**
Return to the previous menu screen.
- 21 **Buttons for other useful features**
Flip open the remote control cover on the front.
RADIO
DTV: Switch between RADIO and DTV mode.
SURROUND
Surround effects on/off.
I/II/III (Sound mode)
Select the sound multiplex mode. (Page 9)
AV MODE
Select a video setting. (Page 22)
SLEEP
Set the sleep timer on (in units of 30 min. up to max. 2hr. 30min) and off. (If the "Time and date" screen is displayed, enter the time and date as explained on page 21, and set the sleep timer again.)
OPC
To switch the Optical Picture Control on and off. (Page 22)
DEMO
Demonstrate the 100Hz effects in a dual screen format. (Page 17)
Ⓜ (Wide modes)
Select the wide mode. (Page 23)
- 22 **AQUOS LINK buttons** **DVD VCR**
If external equipment such as AQUOS BD Player is connected via HDMI cables and AQUOS LINK compatible, you can use these AQUOS LINK buttons. See page 12 for details.
In DVD or VCR mode, press **OPTION** to pause the picture.
Not available when operating STB except powering on the device.
- 23 **REC ● and REC STOP ■ buttons** **DVD VCR**

Turning on the power

Press  on the TV.

Standby mode


Press  on the remote control unit when the TV is on.

- The TV enters standby mode and the image on the screen disappears.
- The  indicator on the TV changes from green to red.
- To completely turn off the power to the TV, unplug the AC cord from the AC outlet. However, do not unplug the AC cord unless otherwise instructed.

Display status indicator

Off	Power off
Red	The TV is in standby mode.
Green	The TV is on.

NOTE

 


- If you are not going to use this TV for a long period of time, be sure to remove the AC cord from the power outlet.
- Weak electric power is still consumed even when  is turned off.
- In DTV input mode, if the power is turned off immediately after a setting change from the menu screen, the new setting or channel information may not be memorised.

Initial auto installation (Analogue)

When the TV powers on for the first time after purchase, the initial auto installation (Analogue) is invoked. Follow the menus and make the necessary settings one after another.

NOTE

- To reconfigure the initial auto installation settings, go to “Channels” and run “Search wizard” from the Setup menu. (Page 19)

- 1 Setting the on-screen display language**
 - ① Press  to select the desired language listed on the screen.
 - ② Press **OK** to enter the setting.
- 2 Setting the country (“Location of TV set” screen)**
 - ① Press  to select your country or area listed on the screen.
 - ② Press **OK** to enter the setting.
 - An overview of settings to be used for auto search displays.
- 3 Press OK to start the search.**
 - The TV searches for, sorts and stores all the receivable TV stations according to their settings and the connected antenna.
 - To abort the initial auto installation in progress, press **END**.
- 4 When the auto sorting is completed, the item “Decoder” displays. Press  to select “EXT 1” or “EXT 2”, and then press OK.**
 - Make sure to select the terminal (EXT 1 or 2) to which the decoder is connected.
- 5 A message appears indicating that the first installation is successfully completed. Press OK, if necessary.**
 - If a recording device with AV-Link is connected to EXT 2, the TV automatically starts transferring the station list data to the recording device.



 
Initial auto installation (DTV)

Digital Video Broadcasting is a transmission scheme. It is much more than a simple replacement for existing analogue television transmission. DVB provides more stations, clearer picture quality and other services displayed on the screen. It also allows a range of new features and services including subtitles and multiple audio tracks.

To watch DTV broadcasts, follow the procedures below to scan all available services in your area.

NOTE

- **Make sure to perform Initial auto installation (Analogue) outlined in the preceding section as well, even if you intend to view only DTV broadcasts.**

- 1** Press **DTV** (or ) , then  to select “DTV”, and then press **OK** to access the DTV mode.
- 2** Press **DTV MENU** and the DTV Menu screen displays.
- 3** Press  to select “Installation”.
- 4** Press  to select “Auto Installation”, and then press **OK**.
If you have already set the PIN, enter it here. If not, enter the factory preset PIN “1234”.
 - See page 20 for setting PIN.
 - A confirmation message displays. Press  to select “Yes”, and then press **OK** to start the search.
- 5** The TV starts scanning all available DTV and radio services in your area.

NOTE


- The language and country settings used in this operation are the settings you have already set while executing the **Initial auto installation (Analogue)**. If you want to reconfigure the country setting, for instance after moving to another country, conduct “Search wizard” from the Analogue Menu again. (Page 19)
- The DTV services are searched and stored according to the channel number information embedded in the TV signal (if available). If the information is not available, the services are stored according to the order in which they were received. If you would like to sort the order, it is possible to arrange it as explained in page 28.
- To cancel the scan in progress, press **END**.
- You cannot select any DTV-related menu items unless “Auto Installation” has been completed.

Channel selection using the station list (Analogue)

This section explains how to change/delete/move/rename stations using the analogue Station List. If you are watching DTV, refer to the “Using the digital programme list” section. (Page 34)

You can also select the desired channel from station list instead of using **0 – 9** numeric buttons or **P** (▲/▼).

- 1 In analogue TV mode, press **OK** when no other menu screen is active.

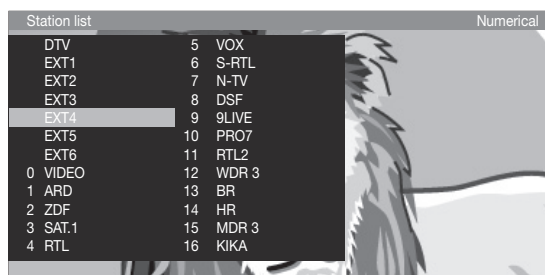

- 2 Press ▲/▼/◀/▶ or **0 – 9** to select the desired station in the station list, and then press **OK** to tune in the station.
 - Press **Blue** to sort the list according to “Alphabetical” or “Numerical”.
 - Refer to the following table for how each numeric button is assigned a set of characters.

NOTE

- This function cannot be operated when the selected input source is HDMI.

To delete, move, and rename stations from the station list

While in the station list, press **Yellow** (Change stations).

Delete

Select a station to delete, and then press **Red** (Delete). Mark more stations with ▲/▼/◀/▶ or **0 – 9**, if desired. Confirm with **OK** or cancel with **Red**.

Move

Select a station to move, and then press **Yellow** (Move). Mark more stations with ▲/▼/◀/▶ or **0 – 9**, if desired. Press **OK** to finish marking. Press ▲/▼/◀/▶ or **0 – 9** to select the position to move to. Confirm with **OK** or cancel with **Yellow**.


- Make sure to select the appropriate block of channels or destination when moving.

Rename

Select a station to rename, and then press **Blue** (Rename). Press any of the numeric buttons **0 – 9** to select the desired character. Remember to press and toggle the numeric button quickly, for the transition to the next digit is rather quick. Repeat until the new name is fully spelt out. Confirm with **OK** or cancel with **Blue**.

- The name can be up to 8 characters.

Entering characters using the 0 – 9 buttons

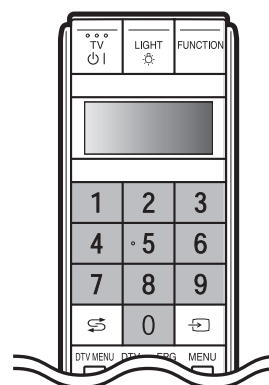

Buttons	Assigned characters and numbers
0	0
1	1, +, -, . (dot), (space)
2	A, B, C, 2
3	D, E, F, 3
4	G, H, I, 4
5	J, K, L, 5
6	M, N, O, 6
7	P, Q, R, S, 7
8	T, U, V, 8
9	W, X, Y, Z, 9

Using $\frac{I/II}{I+II}$ on the remote control unit

DTV mode:

Press $\frac{I/II}{I+II}$ to open the multi audio screen. (Page 35)

Analogue TV mode:

Each time you press $\frac{I/II}{I+II}$, the mode switches as illustrated in the following tables.


NICAM TV broadcasts selection	
Signal	Selectable items
Stereo	Stereo, Mono!
Bilingual	Dual-channel Sound 1, Dual-channel Sound 2, Dual-channel Sound 1+2, Mono!
Monaural	NICAM, Mono!
A2 TV broadcasts selection	
Signal	Selectable items
Stereo	Stereo, Mono!
Bilingual	Dual-channel Sound 1, Dual-channel Sound 2, Dual-channel Sound 1+2
Monaural	Mono

NOTE

- When no signal is input, the sound mode will display “Mono”.
- “Mono!” indicates that you have manually changed to FM mono.

Using external equipment

Setting the input source

To view external source images, select the input source using  on the remote control unit. (Page 22)


NOTE

- The cables marked with * are commercially available items.
- TV-OUT from EXT 1 outputs DTV image when DTV is selected as the input. Otherwise it constantly outputs analogue TV image.
- MONITOR OUTPUT from EXT 2 outputs audio only when EXT 4, 5 and 6 is selected as the input.

INPUT SOURCE
TV
DTV
EXT1
EXT2
EXT3
EXT4
EXT5
EXT6

Connecting a VCR

You can use the EXT 2 terminal when connecting a VCR and other recording equipment. If your VCR supports TV-VCR advanced AV Link systems, you can connect the VCR using the fully-wired SCART cable.

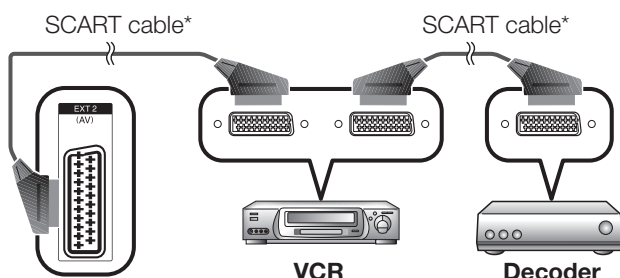


EXT 2 (recommended)

NOTE

- If the above is your connection, make sure to select "EXT 2" under the menu item "Decoder" when you run the Initial auto installation (Analogue) (Page 8) or when changing the setting later (Page 18).
- TV-VCR advanced AV Link systems may not be compatible with some external sources.

Connecting a game console or camcorder

A game console, camcorder and some other audiovisual equipment are conveniently connected using the EXT 3 terminals.

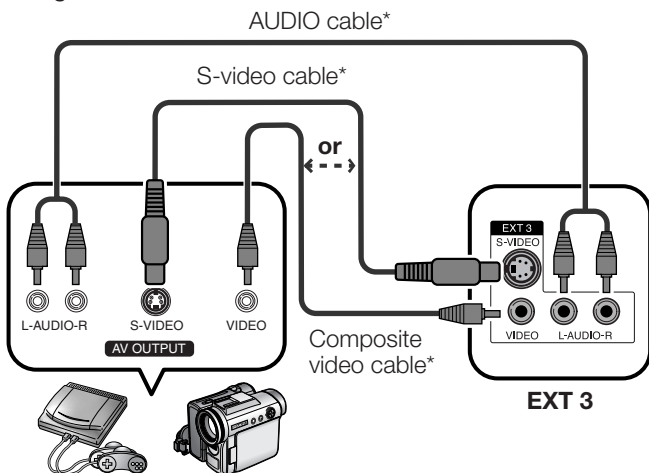


Game console Camcorder

NOTE

- EXT 3: The S-VIDEO terminal has priority over the VIDEO terminals.



Connecting a DVD player

You can use the EXT 3, 4, 5 (HDMI) or 6 (HDMI) terminals when connecting to a DVD player and other audiovisual equipment.

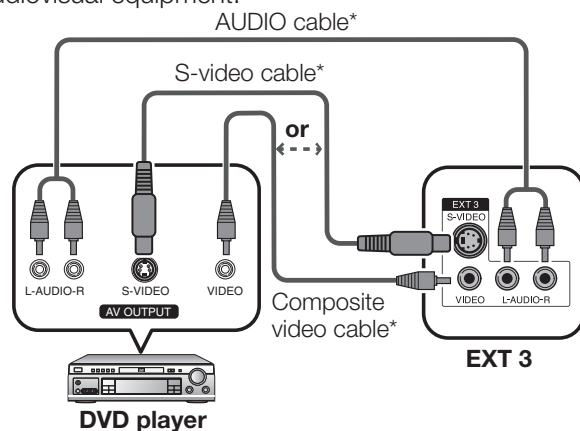


NOTE

- EXT 3: The S-VIDEO terminal has priority over the VIDEO terminals.

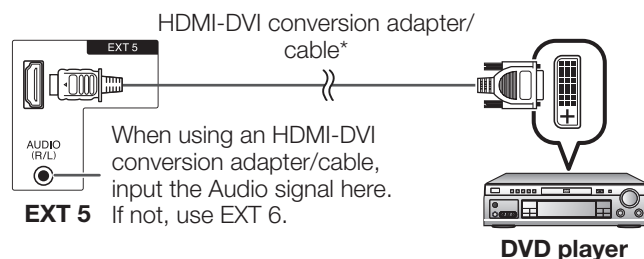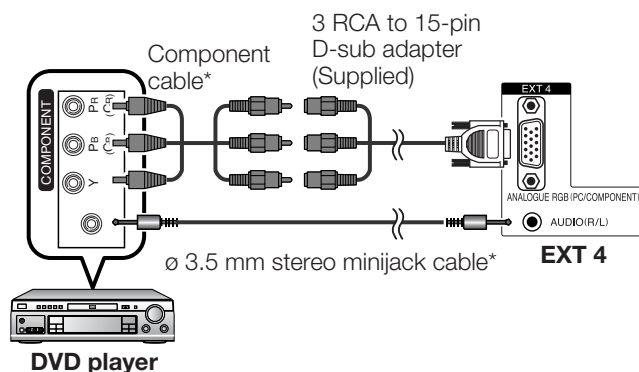

When using an HDMI-DVI conversion adapter/cable, input the Audio signal here. If not, use EXT 6.

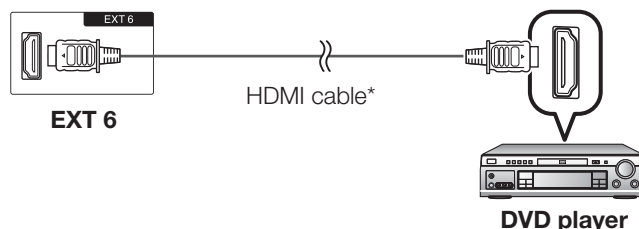


NOTE

- When connecting an HDMI-DVI conversion adapter/cable to the HDMI terminal, the image may not come in clearly.

Using external equipment

Connecting a decoder

You can use the EXT 1 terminal when connecting a decoder and other audiovisual equipment.

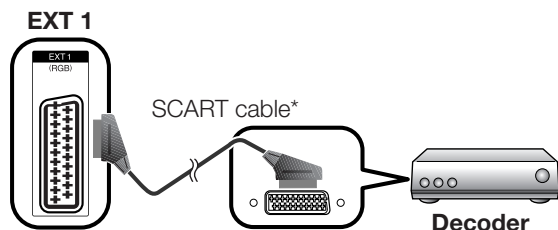


NOTE

- If the above is your connection, make sure to select “EXT 1” under the menu item “Decoder” when you run the Initial auto installation (Analogue) (Page 8) or when changing the setting later (Page 18).

Connecting a PC

Use the EXT 4 terminals to connect a PC.

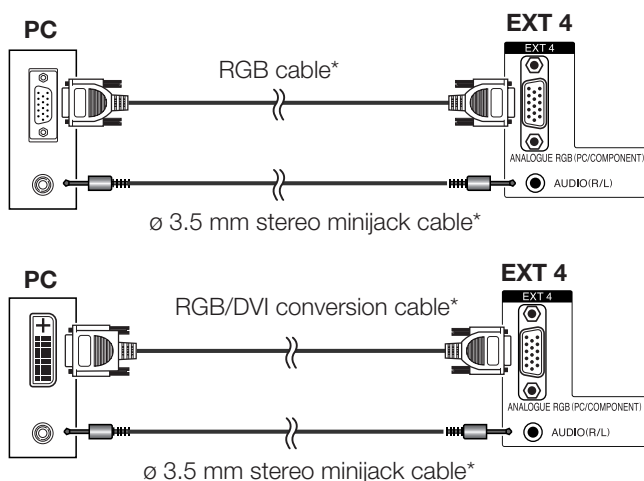

NOTE

- The cables marked with * are commercially available items.
- The PC input terminals are DDC1/2B-compatible.
- Refer to page 41 for a list of PC signals compatible with the TV.
- Macintosh adaptor may be required for use for some Macintosh computers.
- When connecting to a PC, the correct input signal type is automatically detected.

HDMI connection

The HDMI connections (High Definition Multimedia Interface) permit digital video and audio transmission via a connection cable from a player.

The digital picture and sound data are transmitted without data compression and therefore lose none of their quality. Analogue/digital conversion is no longer necessary in the connected devices, which also would result in quality losses.

HDMI/DVI conversion

Using a DVI/HDMI adapter cable, the digital video signals of a DVD can also be played via the compatible HDMI connection. The sound must be fed in additionally. (Page 10)

HDMI and DVI both use the same copy protection method HDCP.

NOTE

- Video noise may occur depending on the type of HDMI cable used. Make sure to use certified HDMI cable.
- When playing the HDMI image, the best possible format for the picture will be detected and set automatically.

Supported video signal:

VGA, 625i (576i), 625p (576p), 525i (480i), 525p (480p), 1125i (1080i), 750p (720p), 1125p (1080p)

If a connected HDMI device is AQUOS LINK compatible, you can take advantage of versatile functions using the AQUOS LINK buttons on the remote control.

See pages 12 - 14 for details.

Controlling HDMI devices using AQUOS LINK

What is AQUOS LINK?

Using the HDMI CEC (Consumer Electronics Control) protocol, with AQUOS LINK you can interactively operate compatible system devices (AV amplifier, DVD, Blu-ray Disc device) using a single remote control.

NOTE

- AQUOS LINK-compatible AQUOS BD Player, AQUOS Audio speaker system and AQUOS Recorder will be on sale after the release of this TV. (As of May 2007)

What you can do with AQUOS LINK

✓ One Touch Play

While the TV is in standby mode, it automatically turns on and plays back the image from the HDMI source.

✓ Single remote control operation

The AQUOS LINK automatically recognises the connected HDMI device and you can control the TV and the devices as if using a universal remote control.


✓ Operating Title list of external device


You can call up the external player's Top Menu or the external recorder's Title list provided that the devices support AQUOS LINK.

✓ Multiple control of HDMI devices

You can select which HDMI device to operate using the **OPTION** button.

NOTE


- Point the remote control toward the TV, not to connected HDMI device.
- Video noise may occur depending on the type of HDMI cable used. Make sure to use a certified HDMI cable.
- Up to 3 HDMI recording devices, one AV amplifier and two players can be connected using this system.
- These operations affect the HDMI device selected as the current input source. If the device does not operate, turn on the device and select the appropriate input source using .

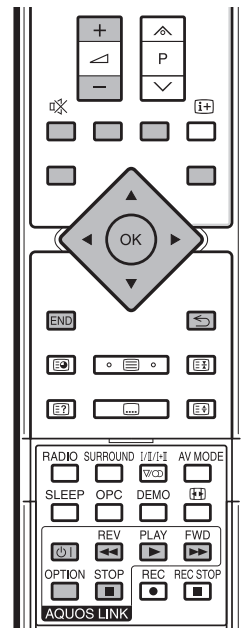


Connecting HDMI device to TV

First connect the AQUOS Audio speaker system or an AQUOS BD Player that supports HDMI CEC protocol.


NOTE

- Refer to the operation manual of the device to be connected for further details.
- After unplugging connection cables or changing the connection pattern, first turn on the power of the TV with all relevant device's power turned on. Change the external input source by pressing , select the appropriate external source and verify the audiovisual output.

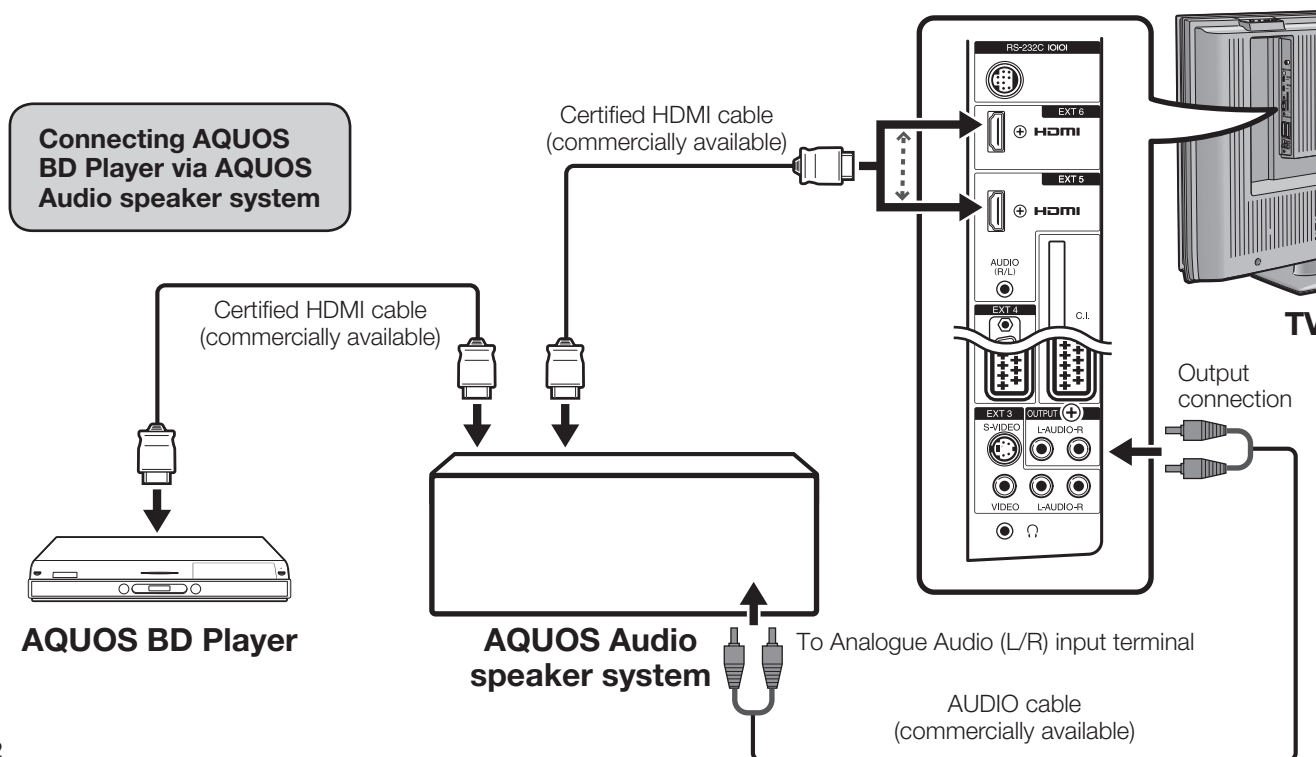

Using external equipment


Connecting an AQUOS BD Player only

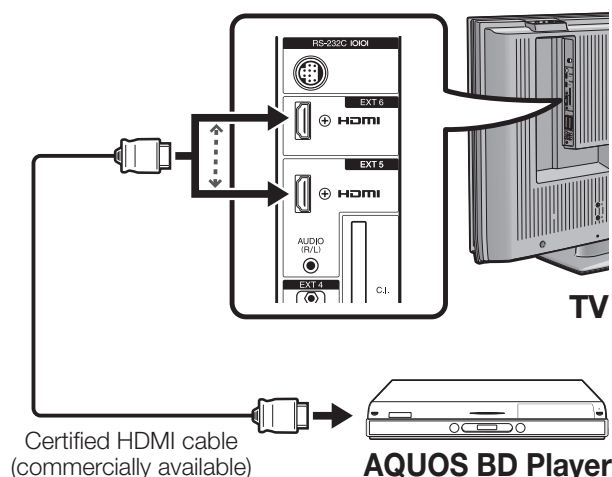

AQUOS LINK Auto Power On

If this is activated, the One Touch Play function is enabled. While the TV is in standby mode, it automatically turns on and plays back the image from the HDMI source.

- 1 Press **MENU** and the TV menu screen displays.
- 2 Press **◀/▶** to select "Setup", and then press **OK**.

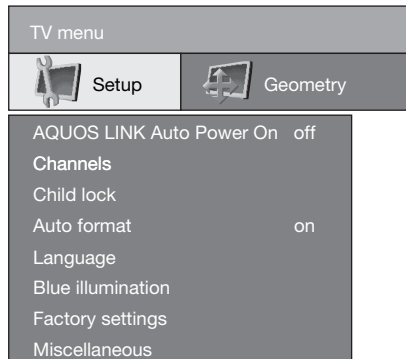

- 3 Press **▲/▼** to select "AQUOS LINK Auto Power On".
- 4 Press **◀/▶** to select "on", and then press **OK**.

NOTE

- The factory default for this item is "off".

Operating an AQUOS LINK device


AQUOS LINK allows you to operate the HDMI-connected device with one remote control.

- 1 Open the remote control's flip cover.
- 2 Press **PLAY ▶** to start playback of a title.
 - See page 14, section "Playback of titles using AQUOS LINK" if you want to start playback using the list of the titles of the AQUOS BD Player.
- 3 Press **FWD ▶▶** to fast forward. Press **REV ◀◀** to reverse. Press **STOP ■** to stop. Press **⏻** to turn the HDMI-connected device on/off.

Listening with the AQUOS Audio speaker system

You can opt to listen to the TV sound only from the AQUOS Audio speaker system and manually change its sound mode.

- 1 Open the remote control's flip cover.
- 2 Press **OPTION**.

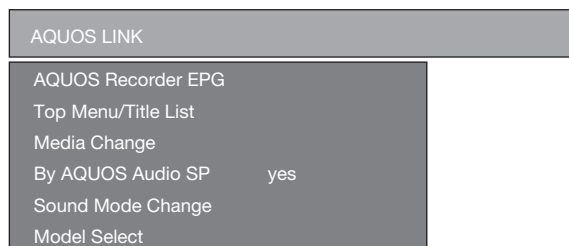

- 3 Press **▲/▼** to select "By AQUOS Audio SP".
- 4 Press **◀/▶** to select "yes".
 - Select "no" to listen to the TV sound.
 - The sound from the TV speaker and headphone terminal is muted and only the sound from the AQUOS Audio speaker system is audible.
 - You can control the AQUOS Audio Speaker system's volume (**▲/▼**) and mute functions (**⏻**).


Manually changing AQUOS Audio speaker system's sound mode

- 1 Open the remote control's flip cover.
- 2 Press **OPTION**.
 - The AQUOS LINK menu displays.
- 3 Press **▲/▼** to select "Sound mode change".
- 4 The sound mode changes every time you press **OK**.
 - Refer to the operation manual of the AQUOS Audio speaker system for details.

Using external equipment

Playback of titles using AQUOS LINK

This section explains how to play back a title in the AQUOS BD Player.

- 1 Power on the AQUOS BD Player, select appropriate external input source using .
- 2 Open the remote control's flip cover.
- 3 Press **OPTION**.
 - The AQUOS LINK menu displays.
- 4 Press **▲/▼** to select "Top Menu/Title List", and then press **OK**.
 - The title list data from the connected AQUOS BD Player displays.
 - You can use **END**, **↵**, **OK**, **▲/▼/◀/▶** and the coloured buttons.
- 5 Select the title with **▲/▼/◀/▶**, and then press **PLAY ▶**.

Selecting media type for CEC-compatible recorder

If your recorder has multiple storage media, select the media type here.

- 1 Open the remote control's flip cover.
- 2 Press **OPTION**.
 - The AQUOS LINK menu displays.
- 3 Press **▲/▼** to select "Media change".
- 4 Select the desired medium, such as DVD or HDD. The media type changes every time you press **OK**.


HDMI device selection

If multiple HDMI devices are connected in a daisy chain, you can specify which device to control here.

- 1 Open the remote control's flip cover.
- 2 Press **OPTION**.
 - The AQUOS LINK menu displays.
- 3 Press **▲/▼** to select "Model select" and then press **OK**. The HDMI device changes every time you press **OK**, and the menu screen goes out.

Recording via the AQUOS Recorder EPG (only for recorder)

You can call up the CEC-compatible recorder's EPG and preset timer recordings using the TV's remote control.

- 1 Power on the AQUOS BD Player, select appropriate external input source using .
- 2 Open the remote control's flip cover.
- 3 Press **OPTION**.
 - The AQUOS LINK menu displays.
- 4 Press **▲/▼** to select "AQUOS Recorder EPG", and then press **OK**.
 - The recorder's EPG is displayed.
 - You can use **END**, **↵**, **OK**, **▲/▼/◀/▶** and the coloured buttons.
- 5 Select the programme to record.
 - Refer to the operation manual of the recorder for details.

Using AV Link function

This TV incorporates four typical AV Link functions for smooth connections between the TV and other audiovisual equipment.

One Touch Play

While the TV is in standby mode, it automatically turns on and plays back the image from the audiovisual source (e.g. VCR, DVD).

TV Standby

When the TV enters standby mode, the connected audiovisual equipment (e.g. VCR, DVD) enters standby mode as well.

WYSIWYR (What You See Is What You Record)

When the remote control unit of the connected VCR has the WYSIWYR button, you can automatically start recording by pressing the WYSIWYR button.

Preset Download

Automatically transfers the channel preset information from the tuner on the TV to the one on the connected audiovisual equipment (e.g. VCR) via the EXT 2 terminal.


NOTE

- Refer to operation manuals of each external equipment for the details.
- Only works when the audiovisual equipment is connected to the EXT 2 terminal on the TV with AV Link via a fully wired SCART.
- The use of the AV Link function is only possible if the TV-set has enforced a complete auto-installation with the connected audiovisual equipment (Page 8, initial auto installation).
The availability of the AV Link function depends on the audiovisual equipment used. Depending on the manufacturer and type of equipment used, it is possible that the described functions may be completely or partially unusable.

Menu operations

On-Screen Display

Example

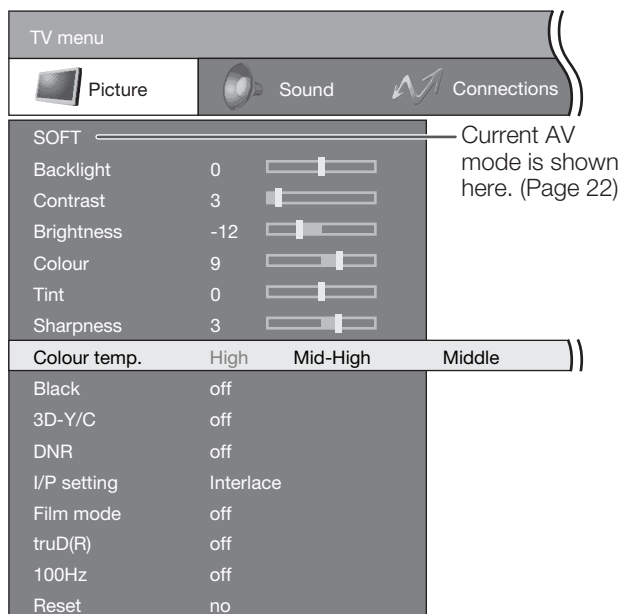

Item highlighted in yellow

- This indicates the item currently selected.

Item displayed in white


- This indicates an item can be selected.

NOTE

- Some menu items do not appear as explained in this manual depending on the selected parameter, input mode or the type of signal received.
- The screens in the operation manual are for explanation purposes (some are enlarged, others cropped) and may vary slightly from the actual screens.

Common operations

- 1 Press **MENU** and the TV menu screen displays.
- 2 Press **◀/▶** to select the desired menu, and then press **OK**.
- 3 Press **▲/▼** to select the desired menu item. Press **OK** to proceed if necessary.

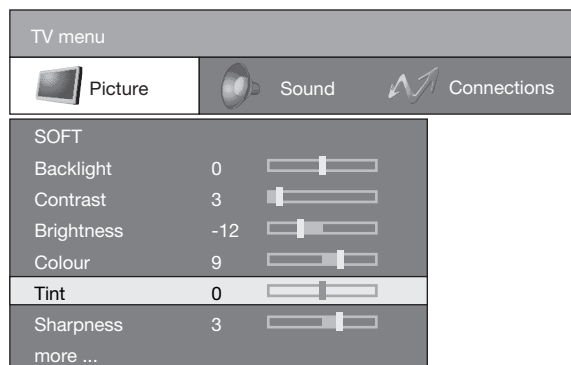

- Press **▲/▼** to select "more..." and then press **OK**, if the item you want to adjust is not displayed.

Colour temp.	High	Mid-High	Middle
Black	off		
3D-Y/C	off		
DNR	off		
I/P setting	Interlace		
Film mode	off		
truD(R)	off		
100Hz	off		
Reset	no		

- 4 Press **◀/▶** to select the desired item or move the item to the desired position. Press **OK** if necessary.
- 5 Press **↶** repeatedly to return to the last menus, or press **END** or **MENU** to exit the menu.

Menu operation without a remote control

This function is useful when there is no remote control within your reach.

Adjusting frequently adjusted items

- 1 Press **MENU** briefly to display the direct control screen.
 - You can adjust the following items: "INPUT SOURCE", "Brightness", "Contrast", "Wide modes" and "Service".
 - "Service" is the item reserved only for service personnel.
- 2 Select the item by pressing **P ▲/▼**.
- 3 Select or adjust by pressing **◀ +/–**.


NOTE

- The direct control menu screen will disappear if left unattended for several seconds.

Menu operations

Picture menu

Various picture-related settings can be optimised.

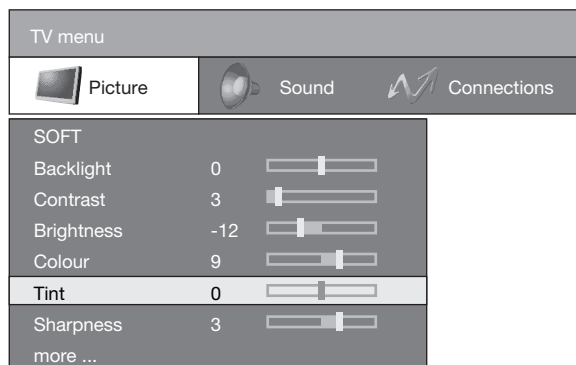

NOTE

- Items with * can be adjusted and reset for each individual AV mode.
- Items with ** appear only when “PC (RGB)” for EXT 4 is selected under “Input select”.
- Press ▲/▼ to select “more...” and then press **OK**, if the item you want to adjust is not displayed.

Backlight*

Dims or brightens the screen.

Contrast*

The contrast settings depend on the brightness of the room. The brighter the surroundings the higher the contrast should be set.

Brightness*

Set the brightness so that the black areas of the picture only appear black.

Colour*

Set the colour intensity according to your personal taste. The colours should appear natural which is best recognizable from the colour of peoples' faces, for example.

Tint*

Set the tint so that the colours appear natural. This can be judged from the colour of peoples' faces, for example.

Sharpness*

Adjust the sharpness to obtain the desired image definition.

Red**

Adjust red colour intensity.

PC only

Green**

Adjust green colour intensity.

PC only

Blue**

Adjust blue colour intensity.

PC only

Colour temp.*

Adjust the colour temperature to give the best white image.

Item

High: White with bluish tone

Mid-High: Intermediate tone between High and Middle

Middle: Natural tone

Mid-Low: Intermediate tone between Middle and Low

Low: White with reddish tone

Black*

For easier viewing, change the viewing depth by selecting a level for automatically adjusting the dark portion of an image.

3D-Y/C

Provide high quality images with minimal dot crawl and cross colour noise by detecting changes in the image.

Item

off: No detecting

Standard: Normal adjustment

Fast: Set the optimum image quality for fast-moving images.

Slow: Set the optimum image quality for slow-moving images.

NOTE

- 3D-Y/C may not operate depending on the input signal type or noisy input signal.
- 3D-Y/C has even more effect on composite video signals (CVBS).

DNR (Digital Noise Reduction)

Produce a clearer image. (off, High, Low)

I/P setting

Adjust the image and input signal can give you a more beautiful picture.

Item

Interlace: Display finely detailed images for TV or video, etc.

Progressive: Display smooth images for still images or graphics, etc.

NOTE

- The I/P setting is set to “Progressive” when Film mode is “on”.

Menu operations

Film mode

Automatically detects a film-based source (originally encoded at 24/25 frames/second, depending on the vertical frequency), analyses it and then recreates each frame for film-like picture quality.

truD(R)

“truD(R)” ensures you steady motion instead of edgy movements and juddering. It further improves the image quality by enhancing contrast and sharpness with advanced video algorithms. When entering the “truD(R)” menu, you can only switch the juddering correction on/off. The picture quality adjustments such as enhanced contrast and sharpness is always on.

NOTE

- This effect is greater on fast moving images such as film contents.
- If “truD(R)” is activated the items “I/P setting” and “Film mode” will not be displayed in the menu screen.
- “truD(R)” will not be displayed in the menu screen depending on the type of signal received (HD signal, etc.).

100Hz

100Hz technology provides superior solutions for digital display picture quality removing motion blur.

NOTE

- Press **DEMO** on the remote control unit to show 100Hz demonstration in a dual screen format.
- This effect is greater on fast moving images.
- 100Hz will have no effect in the following cases.
 - 1) The type of signal received is a PC signal.
 - 2) An OSD is being displayed.
 - 3) Teletext is activated.

Reset

Select if you wish to reset all picture-related items to the factory presets.

Sound menu

Various sound-related settings can be optimised.



NOTE

- Items with * can be adjusted and reset for each individual AV mode.
- Press **▲/▼** to select “more...” and then press **OK**, if the item you want to adjust is not displayed.

Treble*

For weaker or stronger treble

Bass*

For weaker or stronger bass

Loudness

Boosts low and high frequencies to give added punch to playback even at a low volume level.

Auto volume

The volume may vary when receiving stations with different standards or when switching from station to station or during commercial breaks. You can reduce these differences in volume by activating Auto volume. Switch off the automatic function for the reception of music programmes and live broadcasts for a better sound.

Balance

Set the balance to achieve equal volume from the right and left sides.


Clear voice

This function emphasises speech voice against the background noise for more intelligibility. It is not recommended for music sources.

Reset

Select if you wish to reset all sound-related items to the factory presets.

Connections menu

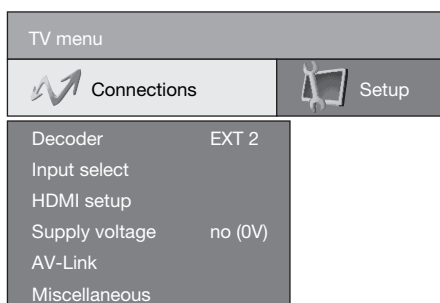

Decoder

Make sure to select the terminal (EXT 1 or 2) to which the decoder is connected.

NOTE

- This setting will be reflected in the “Decoder stations” function under “Miscellaneous”. (Page 19)

Input select

For setting the signal type of external equipment.

Input source	Signal type
EXT 1	Y/C, CVBS, RGB
EXT 2	Y/C, CVBS
EXT 4	PC (RGB), COMPONENT

NOTE

- **If no (colour) image displays, try to change the other signal type.**
- Check the operation manual of the external equipment for the signal type.
- TV, DTV, EXT3, EXT5 and EXT6 are not displayed in Input Select.
- If both CVBS and RGB signals are input to EXT 1 using a SCART cable, the TV may output an RGB signal even though you have designated CVBS for the respective terminal. This happens due to the setting of your external equipment.

HDMI setup

HDMI (High-Definition Multimedia Interface) terminal selection.

- 1 Press **MENU** and the TV menu screen displays.
- 2 Press **◀/▶** to select “Connections”, and then press **OK**.
- 3 Press **▲/▼** to select “HDMI setup”, and then press **OK**.
- 4 Press **▲/▼** to select “EXT5” or “EXT6”, and then press **OK**.
- 5 Press **▲/▼** to select the desired item.
- 6 Press **◀/▶** to select the desired setting.

HDMI setup items	Selectable items	Description
Signal type*	RGB/YCbCr 4:4:4/YCbCr 4:2:2	Select the video signal type from the HDMI terminal.
Colour matrix*	ITU601/ITU709	Select the internal colour space conversion method when an RGB signal is input.
Dynamic range*	Normal/Enhanced	Select the signal amplitude range. Usually, select “Normal”.
Auto view	Enable/Disable	Set whether or not to use Wide mode based on signal recognition, including an HDMI signal.
Audio select**	Digital/Analogue	Select “Digital” for audio signal via the HDMI terminal. Select “Analogue” for audio signal via the AUDIO jack.

NOTE

- Refer to your external equipment operation manual for the signal type.
- Items with * may be greyed out depending on the type of signal input from the external equipment.
- Item marked ** is only available when EXT5 is selected.

Menu operations

Supply voltage

Antennas with an integrated amplifier need a supply voltage on the antenna line. (Page 4)

AV-Link (EXT 2 only)

With this function you can transfer the station data of the TV (such as station preset number/name/channel/frequency) to the recorder if the recorder is set up for AV-Link. This function is available only for conventional analogue stations.

- 1 Press **MENU** and the menu screen displays.
- 2 Press **◀/▶** to select “Connections”, and then press **OK**.
- 3 Press **▲/▼** to select “AV-Link”, and then press **OK**.
- 4 Select “Start transmission”, and then press **OK**.
 - The TV transfers the station list to the AV-Link recorders connected to EXT 2.

Miscellaneous

● Decoder stations

Encrypted stations should be labelled as decoder stations, so that they can be decoded automatically by the connected decoder.

Items	Description
Select decoder station(s)	Press OK to mark an encoded station. The marking can be removed from a station that has already been marked by pressing the same key.
Sound encoding	For reception of encoded audio signals select either “always” if these are always encoded or “Automatic” if these are sometimes encoded. For audio signals which are always uncoded, select “never”.

● Manual adjustment of AV standard


Ask your dealer which standard to select for specific AV equipment (if it is not recognised automatically). Select the appropriate external terminal (EXT 1- 3) and its AV standard as advised.

● Allow switching voltage

If this function is activated and you switch to an AV device (connected to EXT 1 or 2) that delivers switching voltage to playback, its picture and sound will be reproduced immediately at all TV presets. (This function is available only for analogue TV and DTV mode.)

Setup menu

You can search for stations automatically or manually as well as set the menu language, time and date, child lock, on-screen displays, etc.

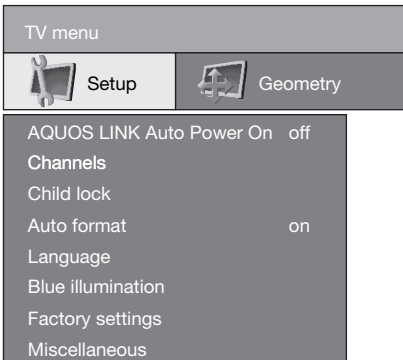

AQUOS LINK Auto Power On

(See page 13.)

Channels

The menu contains the automatic station search and the manual station settings. You can re-sort stations, enter and change station names, and delete stations.

● Search wizard

Use this menu to search for stations automatically once certain settings have been made. (See page 8, **Initial auto installation (Analogue)** for details.)

- 1 Press **MENU** and the TV menu screen displays.
- 2 Press **◀/▶** to select “Setup”, and then press **OK**. Press **▲/▼** to select “Channels”, and then press **OK**. Press **▲/▼** to select “Search wizard”, and then press **OK**.
 - You will get a table for the auto station search.
- 3 If necessary select “Change search settings”, and then press **OK**. Otherwise skip to step 8.
- 4 Press **▲/▼/◀/▶** to select your country or area listed on the screen, and then press **OK**.
- 5 Indicate whether you wish to have “all” stations or “new ones only” searched for using **◀/▶**, and then press **OK**.
- 6 Select the desired TV/colour standard, and then press **OK**.
- 7 Specify from which station position onwards the stations are to be stored, and then press **OK**.
- 8 Press **▲/▼** to select “Start search”, and then press **OK**.

NOTE

- The station search may take some time.
- Do not make any entries or switch off the set during this time.
- When the search has ended you will be shown the found and stored stations sorted in numerical order.
- After the station search has been completed, close the table by pressing **END**.

Menu operations

● Manual tune

Use the manual tune option when receiving TV signal whose TV/Colour standard deviate from the one specified already. However, this requires detailed knowledge.

- 1 Press **MENU** and the TV menu screen displays.
- 2 Press **◀/▶** to select “Setup”, and then press **OK**.
- 3 Press **▲/▼** to select “Channels”, and then press **OK**.
- 4 Press **▲/▼** to select “Manual tune”, and then press **OK**.
- 5 Now enter the necessary setting parameters for each menu item.
 - For “Channel” and “Frequency”, you can initiate the search by pressing **Blue** (Search) or simply enter the number if you know it.
 - For items “TV stand.” and “Col. standard”, you must first press **OK** (Adopt) to confirm the change.
- 6 When you have finished the adjustments, press **Red** (Store) to store the new settings.
- 7 Next, select the channel position to store the new settings. Press **Red** to overwrite the current station or **Blue** to insert the new channel.

Item

Channel: You can enter the channel number directly here. Press **◀/▶** to move between the receiving channel modes.

Frequency: You enter the frequency directly using the numeric buttons. For fine tuning, use the **◀/▶** buttons. Fine tuning may be necessary for analogue channels or for recorder playback via the antenna connection.

Name: You can enter an 8-character channel name. Refer to page 9 for the character input method.

TV stand.: Ask your dealer which standard to select for specific channels or AV equipment. (B/G, I, L, D/K)

Col. standard: Ask your dealer which standard to select for specific channels or AV equipment. Selectable colour standard varies depending on the selected TV standard. (Auto, PAL, SECAM)

● Change stations

You can move stations, enter or change station names, and delete stations. The operation is the same as explained in page 9, “**To delete, move, and rename stations from the station list**”.

Child lock

With the child lock you can bar access to all stations immediately or daily for a certain time period. To use this function, you have first to define your PIN.

NOTE

- To view a locked channel, you must enter the PIN. (See page 31 for locking channels from viewing in DTV mode.)
- The TV power will be turned off if no PIN is entered for several seconds.

● Lock immediately

You can lock out all stations immediately by selecting “yes”. The lock is effective immediately and effective whenever you turn on the TV.

● Lock daily

Here, enter the daily time period, for which your TV set is to be locked.

● Change PIN

This allows you to change your PIN.

NOTE

- When in analogue TV mode, the current PIN becomes invalid if you choose “no” for both “Lock immediately” and “Lock daily”.
- **As a precautionary measure, make a note of your PIN on the back of this operation manual, cut it out and keep it in a safe place that children cannot reach.**
- **See page 36 if you lose or forget your PIN.**

Auto format

When Auto format is switched on, the TV recognises the wide picture mode for Cinemascope or widescreen films and adjusts itself accordingly.

NOTE

- Use Wide modes if an image does not switch to the desired screen format.
- When 4:3 picture format (i.e., “Normal”) is manually selected using the Wide modes function, the Auto format function is temporarily disabled. Select another input source or reset the TV power to restore the Auto format function, and the 4:3 picture format will be automatically selected depending on the transmitted signal.

Language

You can select a language from the Setup menu. Select from among 13 languages. (Dutch, English, Finnish, French, German, Greek, Italian, Polish, Portuguese, Russian, Spanish, Swedish, Turkish)

Blue illumination setting

The LED on the front of the TV is blue when illuminated.

NOTE

- The factory default setting is “on”.
Set to “off” if you do not want the LED to illuminate.

Factory settings

Call up the predefined sound and picture factory settings. Unlike the “Reset” options provided in the Picture and Sound menus, this will reset all parameters to the default value all across the various input modes and AV mode options.

Menu operations

Miscellaneous

● No signal off

When set to "Enable" the TV will automatically enter the standby mode if there is no signal input for 6 minutes.

TV menu ->Setup		
Miscellaneous	Channels	Child lock
No signal off	Enable	Disable
On-screen displays		
Time and date		

NOTE

- When a TV programme finishes, this function may not operate.
- This function is not available in DTV mode.

● On-screen displays

Here you can determine which on-screen displays are to be shown by pressing **(i+)** on the remote control.

Items	Description
On-screen display time	Sets the duration of the TV status and station name display. <ul style="list-style-type: none">• This setting also affects other TV screens. (Volume, Surround, etc.)
Sound mode	Sound mode display on/off ("yes"/"no")
Time	Time information display on/off ("yes"/"no")

● Time and date

When you receive teletext, the correct date and time setting is picked up automatically by the set.
If you do not receive teletext, you should set the "Date" and "Time" manually. Also you have additional items you can adjust as outlined below.

NOTE

- Time and date information configured manually cannot be overridden automatically by the set.
- If the power to the set is cut off (disconnection of AC cord, power outage, etc.), the auto time acquisition mode through teletext reactivates.

Items	Description
Time	If you receive a station with teletext after switching on your TV set, the time and date are automatically registered. In the case of some stations, the date may have to be entered manually. For stations without teletext, enter the time (00:00 to 23:59) and the date (day.month.year) using the numeric buttons on the remote control.
Date	See the above item "Time".
Beginning of daylight-saving time	Enter the date for the beginning of daylight-saving time if it deviates from the date calculated automatically.
End of daylight-saving time	Enter the date of the end of daylight-saving time if it deviates from the date calculated automatically.

Geometry menu

You can set the geometry values of the picture such as picture position and phase relation. The adjustments are stored independently for each input mode.

TV menu		
Geometry	Picture	
Picture horizontal	0	
Picture vertical	0	
Phase position	0	

Picture horizontal

Sets the horizontal picture position by moving the picture left and right.

Picture vertical

Sets the vertical picture position by moving the picture up and down.

Phase position

PC only

Adjusting the phase relation ensures a picture without flicker and noise. (Available only for RGB signal)

Menu operations


Other menu items

Some of the useful features can be directly called up by pressing assigned buttons on the remote control.

AV mode

AV mode gives you five viewing options to choose from to best match the system environment, which can vary due to factors like room brightness, type of programme watched or the type of image input from external equipment.

- 1 Press **AV MODE**.
 - The AV mode menu displays.
- 2 Press **AV MODE** or **▲/▼** while the AV mode menu displays on the screen.
 - As you toggle down the options, each is immediately reflected on the screen. No need to press **OK**.

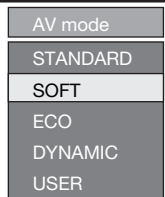

Item

STANDARD: For a highly defined image in a normally bright room (Enhanced Picture Contrast: On)

SOFT: Creates a softer image. (Enhanced Picture Contrast: On)

ECO: Reduces power consumption. (Enhanced Picture Contrast: Off)

DYNAMIC: For a clear-cut image emphasising high contrast for sports viewing. (Enhanced Picture Contrast: On)

USER: Allows the user to customise settings as desired. You can set the mode for each input source. (Enhanced Picture Contrast: Off)

NOTE

- You can adjust the factory presets given in "STANDARD", "SOFT", "ECO" and "DYNAMIC".
- You can assign different AV mode to each external input source.
- Enhanced Picture Contrast technology detects the source video characteristics and smoothly adjusts the screen brightness accordingly, enabling deeper black levels.
- Enhanced Picture Contrast is activated when you turn the OPC function off for the items "STANDARD", "SOFT" and "DYNAMIC" in AV mode.

Status display

Press **i+**, a status display appears for a few seconds.




- In the top line you can see the name of the programme. See page 21 for how to customise the settings for the status display.

INPUT SOURCE

Use the INPUT SOURCE screen to select/check the external equipment connected to the terminal(s) on the back of the TV.

- 1 To watch images from external AV equipment, press **→**. (Page 10)
 - To close the INPUT SOURCE screen, press **→** again.
- 2 Press **▲/▼** to select the corresponding terminal, and then press **OK**.

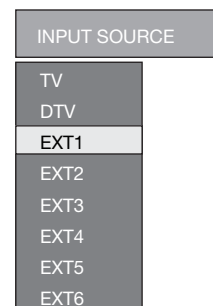

NOTE

- If AQUOS LINK-compatible device connected to EXT 5 or 6 sends model-specific data to the TV, its device name is displayed.

Still image

You can freeze a motion picture on the screen.

- 1 Press **⇐/⇒**.
- 2 Press **⇐/⇒** again to exit still image.

NOTE

- This function may not be available depending on signal condition.

OPC

Automatically adjusts the brightness of the screen.

Press **OPC** on the remote control unit to switch the Optical Picture Control on and off.

NOTE

- When set to "on", the TV senses the surrounding light and automatically adjusts the backlight brightness. Make sure no object obstructs the OPC sensor, which could affect its ability to sense surrounding light.
- Under the factory default condition, OPC becomes active when you select "ECO" for the AV mode.
- OPC turns off whenever an adjustment is made to the "Backlight" setting.
- OPC can be adjusted and reset for each individual AV mode.

Menu operations





Wide modes

You can select the picture size. Selectable picture size varies with the type of signal received.

Basically, if you set Auto format to “on” in the Setup menu, the optimum Wide mode is automatically chosen for every broadcast. You can however, change the screen format manually as explained below.

NOTE

- Aside from manually changing the Wide modes as explained herein, the TV may detect and select the optimum Wide mode according to the signal received.

- 1 Press .
 - The Wide modes menu displays.
 - The menu lists the wide mode options selectable for the type of video signal currently received.
- 2 Press  or / while the Wide modes menu displays on the screen.
 - As you toggle down the options, each is immediately reflected on the screen. No need to press **OK**.

Item (for SD (Standard) signal)

Full: For 16:9 squeeze pictures.

Normal: For 4:3 “standard” pictures. A side bar appears on each side.

Panorama: In this mode the picture is progressively stretched toward each side of the screen.

Cinema 16:9: For 16:9 letterbox pictures. Bars may appear on the top and bottom with some programmes.

Cinema 14:9: For 14:9 letterbox pictures. Bars may appear on the top and bottom with some programmes.

Item (for HD (High-Definition) signal)

Full: Display with the Overscan image. Crop all sides of screen.

Underscan: Display with the Underscan image. (Display with the High-Definition image compressed optimally. Noise may appear on the edge of the screen with some programmes.)

Wide modes

PC only


You can select the picture size.

- 1 Press .
 - The Wide modes menu displays.
- 2 Press  or / to select a desired item on the menu.

NOTE

- Connect the PC before making adjustments. (Page 11)
- Selectable picture size may vary with input signal type.

EXAMPLE

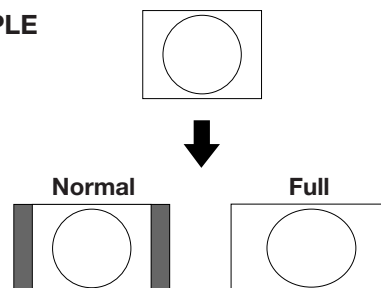

Item

Full: An image fully fills the screen.


Normal: Keeps the original aspect ratio in a full screen display.

Analogue Teletext



What is Teletext?


Teletext broadcasts pages of information and entertainment to specially equipped television sets. Your TV receives Teletext signals broadcast by a TV network, and decodes them into graphical format for viewing. News, weather and sports information, stock exchange prices and programme previews are among the many services available.

Turning on and off Teletext

- 1 Select a TV channel or external input source providing the Teletext programme.
- 2 Press  to display the Teletext.



- Many stations use the TOP operating system, while some use FLOF (e.g. CNN). Your TV supports both these systems. The pages are divided into topic groups and topics. After switching on the teletext, up to 2000 pages are stored for fast access.
- 3 Press  again to display the Teletext on the right screen and the normal image on the left screen.
- Each time you press , the screen switches as shown below.
 - If you select a programme with no Teletext signal, "No text" displays.
 - The same message displays during other modes if no Teletext signal is available.

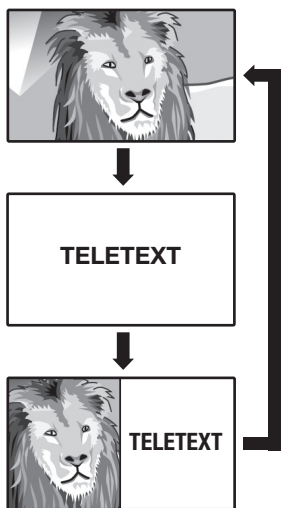


NOTE


- Teletext will not work if the selected signal type is RGB.
(Page 18)

Using analogue teletext menu

 
While in the analogue teletext mode, press **MENU** to display the Teletext Menu.



Newsflash

If you activate "Newsflash" in the teletext menu, the current page is hidden. The  symbol at the top left shows that the newsflash function is enabled (you are in teletext mode). If its contents are updated and it is a small news window, then this is displayed. If, however, it is a page that fills the screen, the symbol is shown in blue and the page can be displayed by pressing **OK**.

 Reveal/Conceal


The teletext contains hidden information e.g., for quiz questions or VPS times in programme preview pages. This is the same function as pressing .

Menu operations

Setup

Menu			
Setup	Newsflash		Reveal
Sub-title pages			
Teletext subtitles		with normal size	
Character set	Standard	Russian	Greek
HiText	yes		

● Sub-title pages

Some stations provide teletext subtitles for the hearing impaired. For every station you can enter the teletext page on which subtitles can be found. The factory setting for all stations is page 150. This function can be started by pressing  with the menu screen open.

● Teletext subtitles

This function displays subtitles transmitted via teletext in normal or double size.


 






● Character set

You can set the teletext language display to the language listed. This is necessary, for example, for Turkish or Polish teletext.

● HiText

HiText (Level 2.5) can be used to select an improved teletext video display. This will be effective as soon as the TV station broadcasts the required information.


Buttons for teletext operation

Buttons	Description
Colour (Red/Green/Yellow/Blue)	Select a group or block of pages displayed in the coloured brackets at the bottom of the screen by pressing the corresponding Colour (Red/Green/Yellow/Blue) on the remote control unit.
0 - 9	Directly select any page from 100 to 899 by using 0 - 9 .
 (Top/Bottom/Full)	Switch the Teletext image to Top, Bottom or Full.
 (Reveal hidden Teletext)	Reveal or conceal hidden information such as an answer to a quiz.
 (Freeze/Hold)	Stop updating Teletext pages automatically or release the hold mode.
 (Subtitle for Teletext)	Display the subtitle or exit the subtitle screen. <ul style="list-style-type: none"> Subtitle will not be displayed when the service does not contain the subtitle information. <div style="background-color: #f0f0f0; padding: 5px; margin-top: 5px;"> User for LC-46XL1E, LC-52XL1E: <ul style="list-style-type: none"> Subtitle is set to off when the power is turned on. User for LC-46XL1S, LC-52XL1S: <ul style="list-style-type: none"> Subtitle is set to on when the power is turned on. </div>
 (Subpage)	Reveal or hide subpages. <ul style="list-style-type: none">  button: Select subpage. Red button: Move to the previous page. Green button: Move to the following page. These two buttons are shown on the screen by the signs  and .

DTV menu operations

DTV menu operation buttons


Use the following buttons on the remote control unit to operate the DTV Menu.

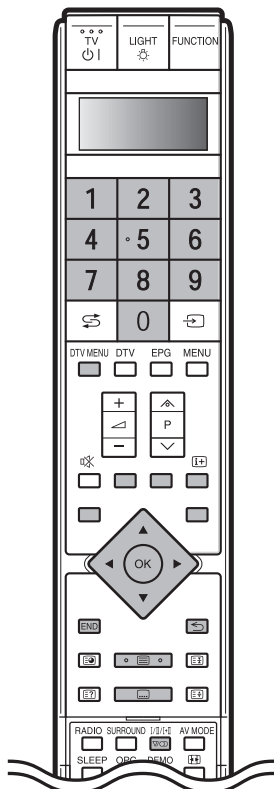

- : Press to display the subtitle selection screen.
- : Press to display TELETEXT or start the MHEG5 presentation, if available.
- 0 - 9:** Aside from direct channel entry, each of the **1 - 9** numeric buttons have a unique function assigned in the Programme Setup screen.
- DTV:** Press to access DTV mode.
- EPG:** Press to open the EPG screen.
- RADIO:** Press to switch between TV and RADIO mode.
 - Due to large variation in transmitted volume levels in RADIO mode, some stations will produce distortion if the volume level is set too high.
- : Press to open the multi audio screen.
- DTV MENU:** Press to open or close the DTV Menu screen.
- : Press to open the service banner or view detailed information from the EPG screen.
- : Press to select a desired item on the screen or adjust a selected item.
- OK:** Press to go to the next step or complete the setting.
 - Press to open the Programme list when no other menu screen is active. (Except external input.)
- END:** Press to exit the current menu screen without saving the changes.
- Colour:** Each of the coloured buttons have a unique function assigned in the menu screen.
- (**Return**): Press to return to the previous step.

DTV On-Screen Display

Example

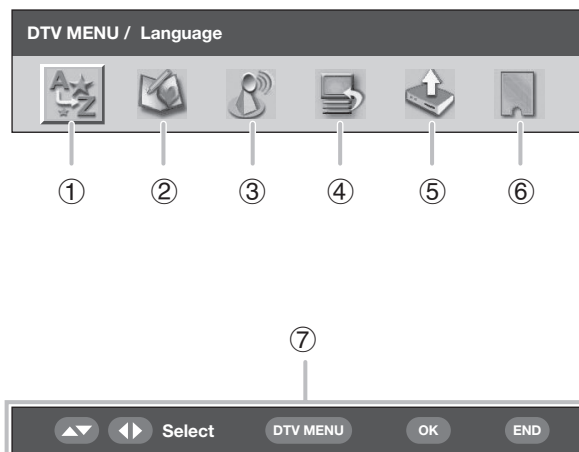

- ① **Language**
 - To customise the language preference for audio and MHEG5 application.
- ② **Programme Setup**
 - To configure various settings for each service. These include: Fav(ourite), Lock, Move, Move To, Skip, Select, Erase, Label, and View functions.
- ③ **Installation**
 - To scan all services available in your area, or to label/erase/re-scan the selected carrier.
- ④ **System Setup**
 - To configure On-Screen Display and Child Lock settings.
- ⑤ **Accessories**
 - To display the current version of the software or to allow the software upgrade to take place.
- ⑥ **Common Interface**
 - To display the current Common Interface details.
- ⑦ **Navigation buttons**
 - To navigate within the DTV Menu screen.

DTV common operations

DTV common menu operation


- 1** Press **DTV** or to access the DTV mode.
- 2** Press **DTV MENU** and the DTV Menu screen displays.
- 3** Press to select the desired menu, and then press **OK** if necessary.
 - From this point, menu operations differ depending on the item you are going to adjust. See the respective section of the menu operation.
 - You cannot select any DTV-related menu items unless "Auto Installation" has been completed.
 - Press **RADIO** to switch between DTV and Radio mode.
 - To exit the current screen without saving the change, press **END**.

DTV menu operations

About using the character set screen

In some cases you may be prompted to enter characters. See below for details.

Sample Alpha Numerical Character Set screen

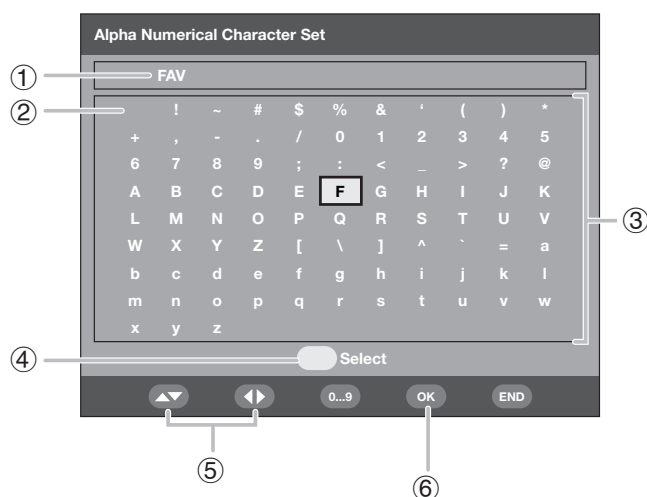

① **Input area**

② **Space**

To add or overwrite with a space.

③ **Character select area**

④ **YELLOW (Select) button**

Press to move between the input area and character select area.

⑤ **▲/▼/◀/▶ button**

Press to move the cursor.

⑥ **OK button**

While in the input area:

Confirms the new name.

Once **OK** is pressed to confirm, a confirmation message displays.

Press **◀/▶** to select “Yes”, and then press **OK**.

While in the character select area:

Confirms the input of a character.

Sample operation using Alpha Numerical Character Set

- 1 Call up the character set screen while in the “Label” or “Carrier Setup” screen. (Pages 29 and 30)
- 2 Press **YELLOW (Select)** to move the cursor to the character select area.
- 3 Press **▲/▼/◀/▶** to select the desired character, and then press **OK**. Repeat until the new name is fully entered.
 - Use space to add a space or overwrite.
- 4 To register the new name, press **YELLOW (Select)** to move the cursor back to the input area.
- 5 Press **OK**.
 - A confirmation message displays.
- 6 Press **◀/▶** to select “Yes”, and then press **OK**.

Language

Select language settings for audio (if a programme is broadcast in more than one language) and MHEG5 service.

- 1 Press **OK** while the cursor is on “Language”.
- 2 Press **▲/▼** to select “1st Pref. Audio”, “2nd Pref. Audio”, “3rd Pref. Audio” or “MHEG”.
- 3 Select a desired language for each item.

NOTE

- See page 20 to change the language displayed on-screen.
- See page 35 to change the subtitle language.
- See page 35 for details on the MHEG5 service.

Available language list

Basque	Greek
Catalan	Italian
Croatian	Norwegian
Czech	Polish
Danish	Portuguese
Dutch	Russian
English*	Serbian
Finnish	Slovak
French	Spanish
Gaelic*	Swedish
Gallegan	Turkish
German	Welsh*


* Languages available for MHEG5 service

Programme Setup

Configure various settings for each service. Press the preassigned **1 - 9** numeric buttons to access each of the functions explained below.

Press **OK** while the cursor is on “Programme Setup”.

Sample Programme Setup screen

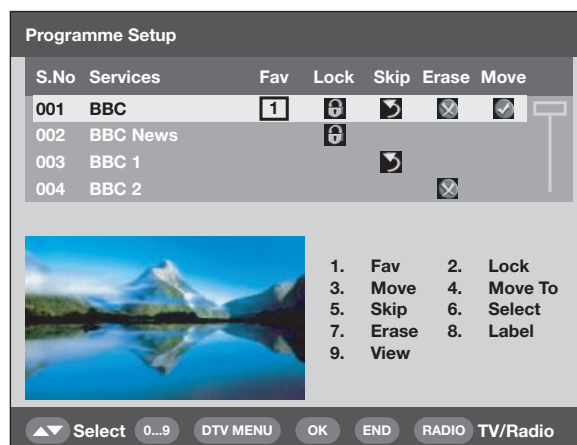

NOTE

- The picture window shows a blank image if Radio services are listed.

DTV menu operations

Favourite

Assign services to 4 different favourite groups.

- 1 Press **▲/▼** to select the desired service.
- 2 Press **1** on the remote control. A selection box displays.
- 3 Press **▲/▼** to register the selected service to any of the 4 favourite groups (None, Fav 1 ... Fav 4) and then press **OK**. An icon displays indicating the favourite status.
 - Do not press **END** to exit the screen here if you wish to register the change.
- 4 Press **OK**.
- 5 Now you can easily select your favourite service from the Programme List. (Page 34)

NOTE

- You cannot register the same service to two different favourite groups.

Lock

When the service is locked, you must enter your PIN whenever you tune to the service.

- 1 Press **▲/▼** to select the desired service.
- 2 Press **2** on the remote control. If you have already set the PIN, enter it here. If not, enter the factory preset PIN "1234". An icon displays indicating the service is locked.
 - Pressing **2** will turn the lock icon on and off. (PIN entry is required when lifting the lock icon.)
 - Do not press **END** to exit the screen here if you wish to register the change.
- 3 Press **OK**.

NOTE

- See page 20 for setting the PIN.

Move

Sort the order of the selected service by moving the service position.

- 1 Press **▲/▼** to select the desired service.
- 2 Press **3** on the remote control. An icon displays indicating the service to be moved.
 - Pressing **3** will turn the move icon on and off.
- 3 Move the selected service to the desired position using **▲/▼**, and then press **OK**.
 - Do not press **END** to exit the screen here if you wish to register the change.
- 4 Press **OK** to register the change.

EXAMPLE:

Moving "002 ZDF" ahead of "001 ARD".

Default order: Press **▲/▼** to select the desired service in 001↔002↔003↔004.

Sorted order: Press **▲/▼** to select the desired service in 002↔001↔003↔004.

001	ARD	→	002	ZDF
002	ZDF		001	ARD
003	SAT. 1		003	SAT. 1
004	RTL		004	RTL

Move To

Use this function to change the position of two selected services

- 1 Press **▲/▼** to select the desired service.
- 2 Press **4** on the remote control.
- 3 Enter the number using **0 - 9** numeric buttons, and then press **OK**. The positions of the selected services are switched.
 - Do not press **END** to exit the screen here if you wish to register the change.
 - You cannot enter a service number that is not listed.
- 4 Press **OK** again, the message "Successfully updated" displays. The change is now registered.

001	ZDF	→	001	RTL
002	ARD		002	ARD
003	SAT. 1		003	SAT. 1
004	RTL		004	ZDF

Skip

Services that are set to skip will not be picked up when pressing **P (V/Λ)**.

- 1 Press **▲/▼** to select the desired service.
- 2 Press **5** on the remote control. An icon displays indicating the service to be skipped.
 - Pressing **5** will turn the skip icon on and off.
 - Do not press **END** to exit the screen here if you wish to register the change.
- 3 Press **OK**.

NOTE

- To view services that are set to be skipped, use **0 - 9** numeric buttons or select from the Programme List.

DTV menu operations

Select

Use this function to jump to the specific service in one step. This is useful when there are many services displayed on screen to scroll through.

- 1 Press **6** on the remote control. Now you can change the service number on the left side of the screen.
- 2 Enter the number using **0 - 9** numeric buttons, and then press **OK**. The highlight moves to the selected service.

Erase

Erase the selected service(s) from the memory.

- 1 Press **▲/▼** to select the desired service.
- 2 Press **7** on the remote control. An icon displays indicating the service to be erased.
 - Pressing **7** will turn the erase icon on and off.
 - Do not press **END** to exit the screen here if you wish to register the change.
- 3 Press **OK**.
 - A confirmation message displays.
- 4 Press **◀/▶** to select "Yes", and then press **OK**.

Label

Change individual service names.

- 1 Press **▲/▼** to select the desired service.
- 2 Press **8** on the remote control. A character set screen displays.
- 3 Enter new name for the service. See page 27 for operations using the character set screen.

View

Tune to the service shown in the picture window.

- 1 Press **▲/▼** to select the desired service.
- 2 Press **9** on the remote control.
 - The image shown in the picture window changes.
- 3 Press **END** to exit the Programme Setup screen to view the image in full screen.

Installation

This section describes how to reconfigure the DTV settings after conducting **Initial auto installation (DTV)** on page 8.

Auto Installation

The TV automatically detects and stores all available services in your area. See **Initial auto installation (DTV)** on page 8 for details.


NOTE

- If the TV detects a new carrier/service that has become available after performing "Auto Installation", the message "Do you want to save?" displays. Press **◀/▶** to select "Yes" or "No", and then press **OK**.

Carrier Scan

Manually add a new carrier by entering the desired carrier number or frequency band.

- 1 Press **◀/▶** to select "Installation".
- 2 Press **▲/▼** to select "Carrier Scan", and then press **OK**.
If you have already set the PIN, enter it here. If not, enter the factory preset PIN "1234".

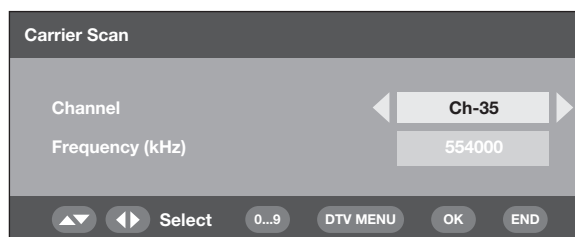

- 3 Press **▲/▼** to select "Channel", then **◀/▶** to enter the carrier number, and then press **OK**.
 - The frequency of the selected carrier in the below cell changes correspondingly.
- 4 After the scan is complete, the screen shows all available services for the selected range.
- 5 A confirmation message displays. Press **◀/▶** to select "Yes", and then press **OK** to save the change.

NOTE


- You can directly enter the frequency instead of step 3. In this case, select "Frequency (kHz)", enter the number using **0 - 9** numeric buttons, and then press **OK**. Use **◀/▶** to move between the digits.
- After performing "Carrier Scan", the order stored by using the "Move" function will revert to the default order.
- See page 20 for setting the PIN.

DTV menu operations

Carrier Setup

This is provided for you to rename (label), erase, or re-scan carriers. "Carrier" in this context refers to a service station that provides a set of individual services.

- 1 Press **◀/▶** to select "Installation".
- 2 Press **▲/▼** to select "Carrier Setup", and then press **OK**.
If you have already set the PIN, enter it here. If not, enter the factory preset PIN "1234".

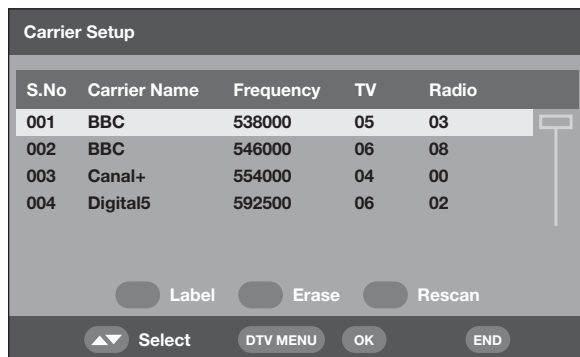

S.No	Carrier Name	Frequency	TV	Radio
001	BBC	538000	05	03
002	BBC	546000	06	08
003	Canal+	554000	04	00
004	Digital5	592500	06	02

Buttons: Label, Erase, Rescan, Select, DTV MENU, OK, END

- ① **To rename the selected carrier:**
Select the carrier, and then press **RED** (Label).
The character set screen displays.
Enter a new name for the carrier. See page 27 for details on using the character set screen.
- ② **To erase the selected carrier:**
Select the carrier, and then press **GREEN** (Erase).
An icon displays indicating the carrier to be erased.
Pressing **GREEN** will turn the erase icon on and off.
Press **OK**.
A confirmation message displays.
Press **◀/▶** to select "Yes", and then press **OK**.
- ③ **To re-scan the selected carrier:**
Select the carrier, and then press **BLUE** (Rescan).
Re-scanning starts.
A confirmation message displays.
Press **◀/▶** to select "Yes", and then press **OK**.

NOTE

- After re-scanning the selected carrier, the order stored by using the "Move" function will revert to the default order.


System Setup

Configure On-Screen Display and Child Lock settings.

OSD Setup

The On-Screen Display appearance and the position/duration of the service banner information can be customised.

- 1 Press **◀/▶** to select "System Setup".
- 2 Press **OK**.

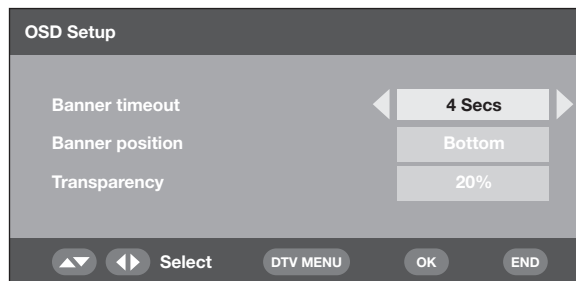

Banner timeout	4 Secs
Banner position	Bottom
Transparency	20%

Buttons: Select, DTV MENU, OK, END

- 3 Press **▲/▼** to select the desired item.
- 4 Press **◀/▶** to select the desired parameter, and then press **OK**.
- 5 A confirmation message displays. Press **◀/▶** to select "Yes", and then press **OK** to save the change.


OSD Setup items	Selectable items	Description
Banner timeout	1 Sec/2 Secs/ ... 7 Secs/None	Select how long the service banner information appears on screen.
Banner position	Top/Bottom	Select whether the service banner information appears on top or bottom of the screen.
Transparency	None /10% /20%/...50%	Select the desired level of On-Screen Display transparency.

DTV menu operations

Child Lock

This function allows TV and Radio services to be restricted. It prevents children from watching violent or sexual scenes that may be harmful.

- 1 Press ◀/▶ to select “System Setup”.
- 2 Press ▲/▼ to select “Child Lock”, and then press **OK**.
- 3 If you have already set the PIN, enter it here. If not, enter the factory preset PIN “1234”.
- 4 Press ◀/▶ to select the desired age/rating (4 ...18/Universal/Parental/X-rated/None), and then press **OK**.

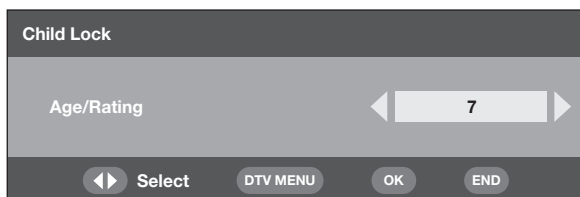

NOTE

- “Universal” and “Parental” are the ratings used exclusively in France.
- “X-rated” is the rating used exclusively in Spain.
- For details about ratings see page 42.

Accessories

Check the version information of the digital module and allow it to be upgraded (when available).

Software Version

- 1 Press ◀/▶ to select “Accessories”.
- 2 Press **OK**.
 - The software version is displayed.

Software Upgrade

The software for controlling the built-in DTV decoder can be upgraded when necessary. In Great Britain this can be achieved via an Over Air Download.

Preparation

Confirm and make a note of the current software version number as in step 2 of **Software Version**.

Manual upgrade

- 1 Press ◀/▶ to select “Accessories”.
- 2 Press ▲/▼ to select “Software Upgrade”, and then press **OK**. The TV checks all carriers if there is a new software available for upgrade.
 - ① **If upgrade via Over Air Download is available at the time:**

A confirmation message appears asking you to accept the upgrade or not.
To download now, press ◀/▶ to select “Yes”, and then press **OK**. After the upgrade is completed, the TV restarts automatically with the new software version installed.
To postpone the download, press ◀/▶ to select “No”, and then press **OK**. Enter the download time for more convenient time as instructed.
The software upgrade will not be carried out if there is no new software available at the specified download time.
 - ② **If upgrade via Over Air Download is NOT available at the time:**

A message tells you that there is no software available to be downloaded.
- 3 Check the new software version number to confirm the successful upgrade.

Auto upgrade

- 1 When you tune to the service that provides the upgrade via Over Air Download, a confirmation message displays.
- 2 Follow the screen prompts.
- 3 Check the new software version number to confirm the successful upgrade.

NOTE

- To scan all carriers for upgrade availability, perform the manual upgrade.
- The software upgrade may take about 30 minutes, but may take longer (up to 1 hour) depending on the signal status. While updating, you cannot switch to TV or external input mode or enter standby mode using ⏻ | on the remote control unit.

CAUTION


- **Do not cut off the power to the TV in any way when the software upgrade is in progress, as this may cause the upgrade to fail. If problem arises ask a qualified service personnel before the software upgrade period expires.**

Common Interface

Check the detailed information on the Common Interface module card in use.

- 1 Press **OK** while the cursor is on “Common Interface”.

- The CI module name is displayed.

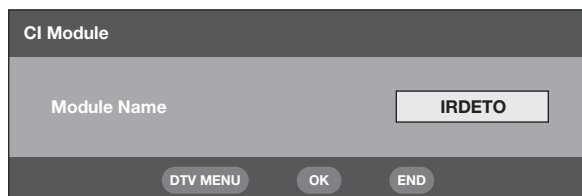


- 2 Press **OK** to access the CI menu.
 - Detailed information on the CI card in use is displayed.
- 3 Press **▲/▼** to select the item, and then press **OK**.
 - Detailed information on the selected item is displayed.

Inserting a CA card

A single DVB Common Interface (CI) will be implemented to allow adoption of a Conditional Access (CA) system by means of a plug-in CA module. Scrambled Broadcasting service can be routed via the CA system.

If the CA system on the CI module requires a smart-card reader, this reader shall be part of the CI module. When the compatible CA card is inserted, you can view the programme without any operations.

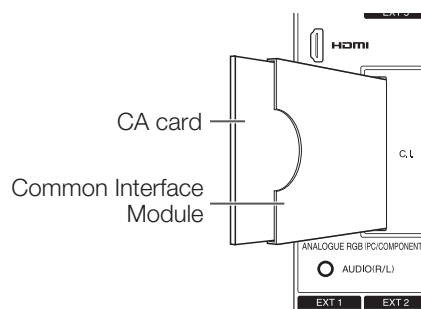

When the compatible card is not inserted:

- ① Select the programme which needs the compatible CA card.
 - The caution screen appears.
- ② Insert the compatible CA card.
 - The caution screen disappears and you can view the programme.

CA system supported by

Crypto Works
Aston CAM
VIAccess
Nagra Vision
Irdeto
MR CAM

NOTE

- To view paid TV broadcasting, you need to make a contract with a service provider. Please contact a service provider for details.
- The Common Interface Module and the CA card are neither supplied nor optional accessories.

Supplying power to the antenna

You may choose to supply power through the antenna terminal. (Page 4)


NOTE

- This function is enabled using the Analogue Menu. See page 19 for details.

About EPG

With the Electronic Programme Guide (EPG), you can check the schedule of DTV and Radio events, view detailed information about them, tune to an event currently on-air and set a timer for future events.

General EPG screen

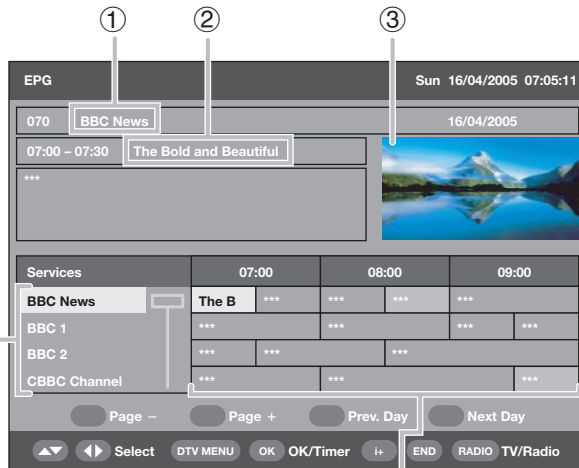

- ① **Service name**
- ② **Event name**
- ③ **Picture window**
- ④ **Service list**
 - Shows the list of all services currently available. As you scroll down the list, the rows in the Event name list on the right will be refreshed correspondingly.
- ⑤ **Event name list**
 - Shows the names of current events in a grid of rows and columns. You can check scheduled event information up to several days ahead, depending on conditions.
 - If a received programme does not contain a name, either "No event name" or a blank space will be displayed. However, the programme can still be watched.

Using the EPG

- 1 Press **EPG**.
 - Pressing **RADIO** will switch between DTV and Radio mode.
- 2 Press **▲/▼/◀/▶** to access the desired service or event.
 - The image shown in the picture window changes.

In the Service list:

 - ① Press **▲/▼** to scroll the page up/down. Or,
 - ② Press **RED** (Page -) or **GREEN** (Page +) to skip to the previous/next page in one step.

In the Event name list:

 - ① Press **◀/▶** to scroll the page left/right. Or,
 - ② Press **YELLOW** (Prev. Day) or **BLUE** (Next Day) to skip to the previous/next day in one step.

- 3 To watch an event currently on-air, press **OK** (OK/Timer).
 - The TV will show the image in full screen.
 - Selecting an event that has not yet started will activate the EPG Timer mode instead.


NOTE

- Pressing **i+** opens the EPG Description screen that provides more information about the selected event. Press **i+** or **END** to exit.

Using the EPG Timer

When the Timer is set, the TV automatically tunes to a preset TV event when its on-air time begins.

- 1 Press **EPG**.
- 2 Press **▲/▼/◀/▶** to select the desired event to be preset from the Event name list, and then press **OK** (OK/Timer).
 - Select an event not yet started.
- 3 Press **RED** (Timer Mode), and then press **▲/▼** to select the desired parameter ("Once", "Daily", "Weekly", or "Monthly"), and then press **OK**.
 - Once set, the preset event is indicated with an orange background in the EPG event name list.

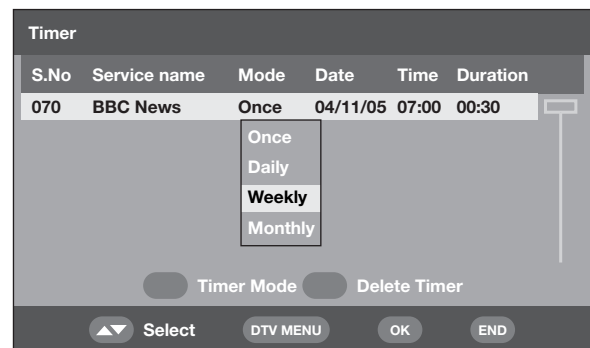


NOTE

- If using this function for recording, make sure to set the timer of your recording equipment as well.
- Do not switch channels while recording using this function.
- This function cannot be set for locked services or when Child Lock applies. (Pages 28 and 31)
- Up to 8 events can be preset using the Timer function.
- If the TV is in standby mode when the preset on-air time nears, it will output signals for recording without image displayed on the screen.
- If you are watching another event, an alarm message displays on the screen a few seconds before the preset time.
- To cancel the preset, select the event to delete, press **GREEN** (Delete Timer), press **◀/▶** to select "Yes", and then press **OK**.
- An alert message displays when the preset events overlap one another.
- The TV power may not come on for several seconds if you preset an event using the EPG Timer and if the power to the TV is cut off.
- Once you preset an event using EPG Timer, in DTV, and then press **⏻** on the remote control to enter the standby mode, the power consumption will be higher than normal (about 27 W) until the programmed event is broadcast. When pressing **⏻** on the TV to turn off the power, the power consumption will be same as normal standby consumption (about 2.7 W), and the EPG Timer will not be in operation.

Using the digital programme list

Select services by using the Programme List instead of using **0 - 9** numeric buttons or **P** (▼/▲).

- 1 Press **OK** when no other menu screen is displayed. (Except external input.)

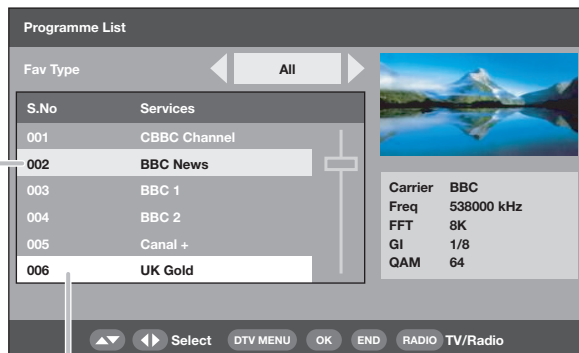

Currently tuned service

Service shown in picture window


- 2 The screen shows the service list in either TV or Radio mode sorted by favourite type (All, Fav 1 - 4) as configured in page 28.
- 3 Press ▲/▼ to select the desired service, and then press **OK**.
 - The image shown in the picture window changes.
- 4 Press **END** to exit the Programme List to watch the image in full screen.

Viewing a service banner

A service banner shows event names, start/end time of event, and other useful information.

- 1 Press **i+**.

Service banner

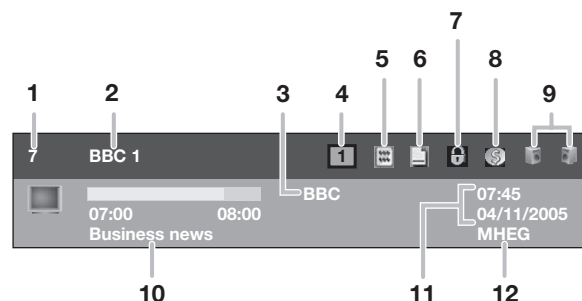

- 1 Logical channel number
- 2 Service name
- 3 Carrier name
- 4 Favourite type
- 5 Teletext available
- 6 Subtitle available
- 7 Lock status
- 8 Scrambled service
- 9 Multi audio status
- 10 Current event name
- 11 Current date and time
- 12 MHEG5 service available

- 2 To display more detailed information, press **i+** again.


- You can verify the signal strength and quality of the selected service here.

DTV menu operations

Using the multi audio function

Change the audio mode and language for the currently viewed service.

- 1 Press $\frac{I/II}{\nabla \square}$ when no other menu screen is displayed.

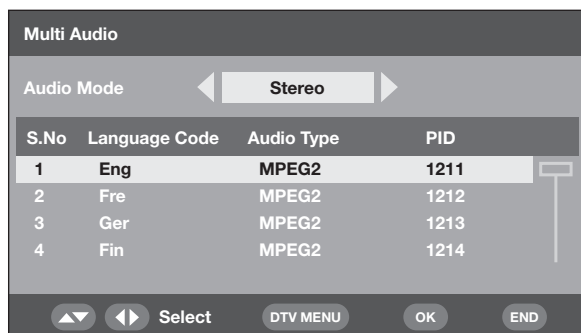

- 2 Press $\triangleleft/\triangleright$ to select the desired audio mode (Left, Right, L+R, Stereo), and then press ∇ to move down.
- 3 Press \triangleup/∇ to select the desired language available for the service, and then press **OK**.


NOTE

- Once you tune to another service or the power is turned off, the setting returns to the parameter set in the Language menu. (Page 27)

Displaying subtitles

Set the desired language for the subtitle display and enable/disable the subtitle display.

- 1 Press \square when no other menu screen is displayed.

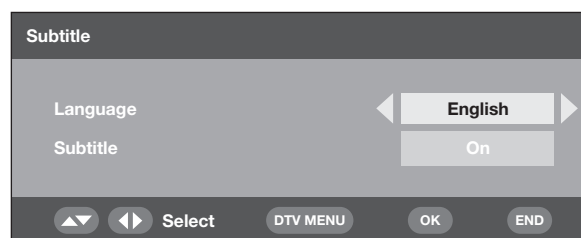

- 2 Press \triangleup/∇ to select "Language", $\triangleleft/\triangleright$ to select the desired language available in the stream, and then press ∇ .
- 3 Select "Subtitle", press $\triangleleft/\triangleright$ to select "On" or "Off", and then press **OK**.
 - A confirmation message displays.
- 4 Press $\triangleleft/\triangleright$ to select "Yes", and then press **OK**.

NOTE

- When "Subtitle" is set to "On", the TV will automatically start subtitle presentation if tuned to a programme containing subtitle data.
- This function deactivates each time you turn off the TV.
- When you press \square while watching DTV broadcasts, the message "No subtitle" may appear instead of the Subtitle OSD screen as mentioned. (This happens depending on the type of programme and happens even when the TV is actually receiving the subtitle data.)
- In this case, press \square first to activate the teletext mode, then press \square .

User for LC-46XL1E, LC-52XL1E:

- Subtitle is set to off when the power is turned on.

User for LC-46XL1S, LC-52XL1S:

- Subtitle is set to on when the power is turned on.

Using the MHEG5 application (UK only)

Some services bring you programmes with the MHEG (Multimedia and Hypermedia Expert Group) application encoded, letting you experience DTV interactively. When provided, the MHEG5 application will start when you press \square .

Sample MHEG5 screen

 
 
 



NOTE

- When "Subtitle" is set to "On", and the TV is tuned to a service containing both MHEG5 and subtitle data, the subtitle takes priority and subtitle presentation starts automatically. In this case press \square to start the MHEG5 presentation.

Appendix

Troubleshooting

Problem	Possible Solution
<ul style="list-style-type: none"> No power. 	<ul style="list-style-type: none"> Check if you pressed  on the remote control unit. If the indicator on the TV lights up red, press . Is the AC cord disconnected? Check if you pressed  on the TV.
<ul style="list-style-type: none"> Unit cannot be operated. 	<ul style="list-style-type: none"> External influences such as lightning, static electricity, etc., may cause improper operation. In this case, operate the unit after first turning the power off, or unplugging the AC cord and re-plugging it in after 1 or 2 minutes.
<ul style="list-style-type: none"> Remote control unit does not operate. 	<ul style="list-style-type: none"> Is the FUNCTION button set correctly? Set it to the TV setting position. (Page 37) Are batteries inserted with polarity (+, -) aligned? Are batteries worn out? (Replace with new batteries.) Are you using it under strong or fluorescent lighting? Is a fluorescent light illuminated to remote control sensor?
<ul style="list-style-type: none"> Picture is cut off. 	<ul style="list-style-type: none"> Is the image position correct? (Page 21) Are screen mode adjustments (Auto format or Wide modes) such as picture size made correctly? (Pages 20 and 23)
<ul style="list-style-type: none"> Strange colour, light colour, or dark, or colour misalignment. 	<ul style="list-style-type: none"> Adjust the picture tone. (Page 16) Is the room too bright? The picture may look dark in a room that is too bright. Check the colour standard. (Pages 19 and 20) Check the HDMI setup setting. (Page 18)
<ul style="list-style-type: none"> Power is suddenly turned off. 	<ul style="list-style-type: none"> The unit's internal temperature has increased. Remove any objects blocking vent or clean. Is sleep timer set? Press SLEEP on the remote control unit until it sets to off. Is "No signal off" activated? (Page 21)
<ul style="list-style-type: none"> No picture. 	<ul style="list-style-type: none"> Is connection to other components correct? (Pages 10 and 11) Is input signal type selected correctly after connection? (Page 18) Is the correct input source selected? (Page 22) Is non-compatible signal being input? (Page 41) Is picture adjustment correct? (Page 16) Is the antenna connected properly? (Page 4)
<ul style="list-style-type: none"> No sound. 	<ul style="list-style-type: none"> Is the volume too low? Make sure that headphones are not connected. Check if you pressed  on the remote control unit.
<ul style="list-style-type: none"> The TV sometimes makes a cracking sound. 	<ul style="list-style-type: none"> This is not a malfunction. This happens when the cabinet slightly expands and contracts according to change in temperature. This does not affect the TV's performance.

Cautions regarding use in high and low temperature environments

- When the unit is used in a low temperature space (e.g. room, office), the picture may leave trails or appear slightly delayed. This is not a malfunction, and the unit will recover when the temperature returns to normal.
 - Do not leave the unit in a hot or cold location. Also, do not leave the unit in a location exposed to direct sunlight or near a heater, as this may cause the cabinet to deform and the LCD panel to malfunction.
- Storage temperature: -20°C to +60°C.

IMPORTANT NOTE ON RESETTING THE PIN



We suggest that you remove the following instruction from the operation manual to prevent children from reading it. As this operation manual is multilingual, we also suggest the same with each language. Keep it in a safe space for future reference.



- Enter "3001" when PIN entry is required.
 - This operation cannot be performed from the DTV menu screen.
- Restore the current PIN under "Change PIN" (TV menu > Setup > Child lock).

Using universal remote control

You can operate the connected AV products (DVD player/recorder, SetTopBox, VCR and others) by setting up your remote control as a universal remote control unit.

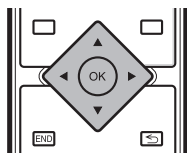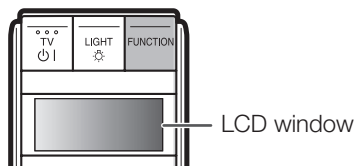

Presetting manufacturer code

- 1 Press **FUNCTION** repeatedly until you reach the device you wish to control. (TV, DVD1, DVD2, STB1, STB2 and VCR)
 - Press this button briefly (for more than 0.2 second) to move between the items.
- 2 Press and hold both **FUNCTION** and **OK** for 3 seconds.
 - In the LCD window, the 3-digit manufacturer code blinks.
- 3 Enter the 3-digit manufacturer code using **▲/▼/◀/▶**, and then press **OK**.
 - The TV returns to normal TV mode.

LCD Window Display	Category	Manufacturer
DVD1/DVD2	DVD player	Magnum - Zenith
	DVD recorder	JVC - Yukai
	DVD/LD	Pioneer
	DVD part of DVD/VCR	Bush - Toshiba
	DVD part of DVD/DVR	Panasonic - Toshiba
	HTIB*	Aiwa - Sony
	DVD part of SAT/DVD	Humax
	DVD part of TV/DVD	Bush - Toshiba
VCR	VCR part of DVD/VCR	Bush - Toshiba
	VCR part of TV/VCR	Aiwa - Toshiba
	VCR	Adelsound - Yoko
STB1/STB2**	SAT part of SAT/DVD	Humax
	SAT part of SAT-DVR	BSSkyB - Zehnder
	Satellite	AB Sat - Woorisat
	Satellite receiver	Hauppauge
	Satellite receiver/recorder	Humax - Kathrein
	Cable box	ABC - Wittenberg

* Home Theatre in a Box System

** SAT and CBL are integrated.

Manufacturer code

DVD	Manufacturer code	DVD	Manufacturer code
Sharp	029 128 143 177 191	Magnavox	002 106 165
Magnum	101	Marantz	049 098 200 201
Acoustic Solutions	001	Matsui	030
Aiwa	004 039 131 231	MBO	001 145
Akai	034 095	Mediencom	150
Akura	108	Medion	096 101 112 128 158
Alba	001 014 017 018 040	Metz	094
Apex	139	MICO	104
Awa	001	Micromax	096 101 128
Avion	001	Micromedia	002
Best Buy	107	Micromega	171
Boston	152	Microstar	096 101 128
Brainwave	034	Mirror	158
Brandt	002 012 030	Mitsubishi	125 166
Britannia	150	Mizuda	106 107
Bush	001 019 032 042 045 087 092 102 106 149 158 209 223 224 225 226	Monyka	103
Cambridge Audio	104 163	Mustek	001 100 198
CAT	153 154	Mx Onda	104
Celestial	161	NAD	143
Centrex	109	Naiko	109
Centrum	154	Nakamichi	147
CGV	104	Neufunk	103
CineVision	157	NU-TEC	102
Classic	001 100	Omni	150
Clatronic	106	Onkyo	002 097 165
Coby	001	Optim	151
Conia	102	Optimus	168
Crypto	159	Orava	106
C-Tech	105	Orion	087
CyberHome	003 022 025 036	Oritron	096
Daewoo	023 038 078 113 114 115	P&B	106
Dalton	162	Pacific	105
Dansai	034 151 227	Palsonic	149
Daytek	005 020	Panasonic	013 079 093 123 164 194 195 214 232
DEC	106	Philips	233 002 006 027 035 043 044 049 074 098 121 127 165 171 181 202
Denon	123 138 164 188 199 210	Philips Magnavox	121
Denver	106 108 133	Pioneer	007 008 010 046 094 168 174 178 183 207 220
Denzel	103	Proline	109
Desay	155	Provision	106
Diamond	104 105	Raite	103
Digitor	160	RCA	135
DK Digital	032 176	REC	149 150
Dmtech	111	RedStar	108
Dual	001 103	Reoc	105
D-Vision	034	Revoy	156
DVX	105	Roadstar	001 014 106 149
Easy Home	107	Rowa	102 109
Eclipse	104	Rowsonic	154
Elita	034 124 134	Saba	012 030
Emerson	129	Sabaki	105
Enzer	103	Sampo	136
Euroline	034	Samsung	011 076 077 126 175 186 213 217
Finlux	104	Sansui	104 105
Fisher	132	Sanyo	028 033 089 179 189 218
Global Solutions	105	ScanMagic	001
Global Sphere	105	Schneider	096 110 111 112
Go Video	126	Scientific Labs	105
GoldStar	015	Scott	017 162
Goodmans	001 014 018 045 106 109 158 203 228	SEG	014 026 103 105 110 141
Graetz	103	Sherwood	140
Grundig	018 038 099 109 127	Shinco	135
H&B	106 156	Sigmathek	107
Haaz	104 105	Silva	108
Harmon/Kardon	144	Singer	104 105
HE	001	Skymaster	001 026 100 105 134
HIMAX	107	Skyworth	108
Hitachi	011 047 088 101 103 107 126 190 196 206 215	SM Electronic	001 105
Home Electronics	001	Sony	004 009 021 031 041 075 122 169 180 204 205 221 222
Humax	048	Soundmaster	105
Innovation	096 101 128	Soundmax	105
JDB	001	Standard	105
Jeutech	152	Star Cluster	105
JVC	002 016 080 081 082 083 084 085 120 173 182 184 212	Starmedia	106
Kenwood	037 123 142 170 208 211 219 229	Supervision	001 105
Kingavon	106	Synn	105
Kiss	103 156	TCM	096 101 128
Koda	106	Teac	094 102 105 192
KXD	107	Tec	108
Lawson	105	Technics	101 164 193 232
Lecson	151	Technika	034
Lenco	106	Technosonic	034
LG	015 024 090 129 185 216	Telefunken	154
Life	096 128	Tevion	096 101 105 128 162
Lifetec	096 101 128	Thomson	012 091 116 117 118 119 148 167 172 197
Limit	105	Tokai	103 108
Loewe	044 127	Toshiba	002 086 087 121 165 187
LogicLab	105		
Luxor	109		

Appendix

DVD	Manufacturer code
TruVision	107
United	001
Voxson	001
Vtrek	159
Wharfedale	104 105 130
Wintel	152
Xbox	167
Xlogic	105
XMS	149
Yakumo	109
Yamada	109
Yamaha	006 013 123 137 164 230
Yamakawa	103 146
Yukai	001
Zenith	002 129 165

DVD Recorder	Manufacturer code
JVC	057 058 059 060
LG	065
Panasonic	052 062
Philips	050 051 053 061 063 064
Sony	054 055 056
Toshiba	067 068 069
Yukai	066

DVD/LD	Manufacturer code
Pioneer	007

DVD/VCR Combo	Manufacturer code
Sharp	029 (DVD)/028 032 (VCR)
Bush	087 (DVD)/036 (VCR)
Daewoo	078 (DVD)/029 (VCR)
Hitachi	088 (DVD)/025 (VCR)
JVC	080 081 082 083 084 085 (DVD)/007 025 033 034 (VCR)
LG	015 (DVD)/014 030 (VCR)
Orion	087 (DVD)/038 (VCR)
Panasonic	079 (DVD)/031 037 (VCR)
Philips	074 (DVD)/026 (VCR)
Samsung	076 077 (DVD)/210 (VCR)
Sanyo	089 (DVD)/039 (VCR)
Sony	075 (DVD)/027 (VCR)
Toshiba	086 (DVD)/035 (VCR)

DVD/DVR	Manufacturer code
Panasonic	052 062
Pioneer	070 071 072
Samsung	073
Toshiba	067

HTIB	Manufacturer code
Alwa	231
DK Digital	176
Hitachi	215
JVC	184
Kenwood	219
LG	216
Mustek	198
Panasonic	194 195 214
Pioneer	220
Samsung	213
Sanyo	189 218
Sony	205 221 222

SAT/DVD	Manufacturer code
Humax	048

TV/DVD Combo	Manufacturer code
Bush	092
LG	090
Panasonic	093
Thomson	091
Toshiba	087

TV VCR combo	Manufacturer code
Alwa	042
Bush	042
Daewoo	021 040
GoldStar	209
Goodmans	047
Grundig	041
Orion	045
Philips	041 046
Roadstar	042 045
Samsung	043
Sony	044
Tatung	042
Toshiba	042 043 045 048

VCR	Manufacturer code
Adelsound	056
Adyson	055

VCR	Manufacturer code
Sharp	001 015 028 032 063 064 073
	089 149 150 151 153 165
Aiwa	014 026 042 045 049 050 051
	059 060 102 111 149 150 153
Akai	045 050 058 060 128 149 150
	153 158 193
Akiba	055
Akura	050 055 060
Alba	021 026 045 051 052 055 058
	061 128 129 130
Allorgan	043 126
Ambassador	052 058
Amstrad	026 049 055 061 149 162 189
Anitech	055
Ansonic	056
ASA	053 054 059 149 150 153
Asuka	026 049 053 054 055 059 149
ASWO	179
AudioSonic	061
AudioTon	058
Baird	021 026 049 050 060 061 123
	154
Basic Line	021 051 052 055 058 061
Bauer	160 187
Baur	054 070
Beaumarck	157
Bestar	021 052 058 061
Black Panther Line	021 061
Blaupunkt	006 008 054 057 069 070 071
	083 119 124 125 149 150 151
	153 171 179

Blue Sky	051 059
Bondstec	052 055 058
Brandt	009 060 132
Brandt Electronique	154
Brinkmann	051
Broksonic	155 157
BSR	188
Bush	021 026 036 042 045 051 055
	061 075 127 128 129 130

Carrefour	121
Casio	026
Cathay	061
Catron	052 058
CGE	026 049 050 060 149
Cimline	051 055
Clatronic	052 055 058
Combitech	045
Condor	021 052 058 061
Continental Edison	154
Crown	021 052 055 058 061
Curtis Mathes	157
Cybermaxx	072
Daewoo	018 021 029 040 045 052 058
	061 072 121
Dansai	055 061
Dantax	051
Daytron	021 061
De Graaf	054
Decca	007 026 049 050 054 060
DeGraaf	063 120 123
Denko	055
Denon	098
Diamant	059 209
Dual	026 050 054 060 061 154
Dumont	026 049 054 123

Elbe	061
Elcatech	055
Elin	067 126
Elsay	055
Elta	055 061
Emerson	055 121 155
ESC	021 058 061 126
Etzuko	055
Europhon	058
Ferguson	007 009 026 050 060 071 132
	201 202 204
Fidelity	026 049 055
Finlandia	026 054 063 120 123
Finlux	026 049 050 054 080 120 123
	149 150 153 197 207
Firstline	018 051 053 055 059 080 114
	120 121 127
Fisher	058 122 123 149 150 153 159
	178

Flint	051
Formenti/Phoenix	054
Frontech	052 058
Fujitsu	026 049
Funai	026 049 149 150 153 188
Galaxy	026 049
GBC	052 055 058
GE	157
GEC	054
Geloso	055

VCR	Manufacturer code
General	052 058
General Technic	006 043 051
Genexxa	123
Go Video	157
GoldHand	055
GoldStar	026 049 053 059 149 150 153
	155 157 209
Goodmans	021 026 047 049 051 052 053
	055 058 059 061 067 073 126
	127
Graetz	050 060 123 126
Granada	026 054 057 059 063 071 120
	123 126

Grandin	021 026 049 052 053 055 058
	059 061 072
Grundig	009 041 054 055 057 069 070
	071 074 075 076 090 125 149
	150 153 173 179 181 182 187

Hanseatic	053 054 059 061
Hantor	058
Harwood	055
HCM	055 075
Hinari	045 051 055 056 060 061 075
	127
Hisawa	045 051 166
Hitachi	005 016 019 026 049 050 054
	056 060 098 115 120 123 126
	149 150 153 175 185

Hypson	051 055 061
Impego	052 058
Imperial	026 049 126 149
Ingersol	056 126
Inno Hit	021 052 054 055 058 061 067
	126

Innovation	006 043 051
Interbuy	053 055 059
Interfunk	054 123
Intervision	026 049 051 059 061 209
Irradio	053 055 059
ITT	050 060 077 123 126
ITT Nokia	154
ITV	021 053 058 059 061

JBL	147
JC Penney	098 155 157
JVC	007 025 033 034 050 060 077
	078 079 098 105 106 140 149
	150 153 154 161 200 204

Kaisui	055
Karcher	054
Kendo	018 021 051 052 055 059 128
Kenwood	050 060
Kimari	122
Kneissel	045 051
Korpel	055
Kuba	122
Kyoto	055
Lenco	021
Leyco	055
LG	010 014 024 026 030 049 053
	059 112
Lifetec	006 043 051 072
Loewe	006 137
Loewe Opta	053 054 056 057 059 071 124
	131 151 169 179 209

Logik	055 056 067 126
Lumatron	021 061 072
Luxor	055 063 073 080 114 122 123
	149 150 153 180 195

M Electronic	026 049 059
Magnin	157
Manesth	018 055 121
Marantz	054 057 071 073 179
Mark	061
Matsui	026 045 051 053 056 059 126
	133 162 164

Mediator	054
Medion	006 043 051 072
M-Electronic	026 059 209
Memorex	026 049 053 059 063 098 122
	123 155
Memphis	055
Metz	006 008 057 070 071 124 125
	131 179 181 187

MGN	157
Micromaxx	006 043 051 072
Microstar	006 043 051 072
Migros	026 049
Minerva	070 071 125 181 187
Minolta	098
Mitsubishi	007 049 054 080 107 114 149
	150 153 155 170 199

Multitech	026 049 052 054 055 058 123
Murphy	026 049
National	006 069 124
NEC	007 050 060 154 155 177

VCR	Manufacturer code
Neckermann	050 054 057 060 154 179
NEI	054
Nesco	026 045 055
Nikkai	052 055 058 061
Nokia	050 060 061 063 067 120 123
	126 128 180 195
Nordmende	007 009 050 060 077 124 134
	149 150 153 154 161 201 204
	205

Oceanic	026 049 050 060 063 123
Okano	051 055 061 128
Optimus	155 156
Orion	038 045 051 056 129 130 155
	163 166 188 191 192

Orson	026 049
Osaki	026 049 053 055 059
Osune	127
Otake	129 130
Otto Versand	054 187
Palladium	050 053 055 056 057 059 060
	071 126 128

Panasonic	002 006 008 023 031 037 069
	086 091 101 124 131 137 149
	150 151 153 155 167 169 171
	174 190 198
Pathe Cinema	056 114
Pathe Marconi	050 060 154
Pentax	098
Perdio	026 049
Pilico	055 098
Philips	005 011 017 019 020 026 041
	046 054 057 062 065 071 076
	077 087 090 092 093 095 100
	104 108 110 136 149 150 153
	179

Phonola	054
Pioneer	007 054 120 149 150 153 156
	203

Portland	021 052 058 061
Prinz	026 049
Profex	055
Profi-Tronic	126

Proline	026 049 075 127
Prosonic	026 051 061
Pulsar	157
Pye	005 054
Quasar	155
Quelle	049 054 057 070 071 149 150
	153 179 181 182 187

Radialva	055 059 063
Radio Shack	155
Radiola	054 151
Realistic	155 157
Rex	050 060 077 154 161
RFT	052 054 055 058
Roadstar	021 042 045 053 055 059 061
	067 126

Royal	055
Saba	009 050 060 077 138 139 149
	150 153 154 161

Saisho	051 055 056 162
Salora	080 114 123 149 150 153 180
Samsung	210 043 067 126 157 176 194
	196

Samurai	007 052 055 060
Sansui	007 050
Sanwa	056
Sanyo	039 063 099 109 122 123 149
	150 153 180

Saville	045 061 126
SBR	054
Schaub Lorenz	026 049 050 060 123
Schneider	018 021 026 049 051 052 053
	054 055 059 061 126 149 150
	153

Scott	155
Sears	098 155
SEG	055 061 067 126
SEI-Sinudyne	054 056 188
Seleco	050 058 059 060 154 161
Sentra	052 055 058 127
Sentron	055
Shintom	055 123
Shivaki	053 059
Shorai	056
Siemens	053 057 059 070 071 123 125
	179 181 187

Silva	053 059
Silver	061
Sinudyne	054 056
Solavox	052 058
Solovox	058
Sonitron	122
Sonneclair	055
Sonoko	021 061 072

Appendix

VCR	Manufacturer code
Sonorol	063
Sontec	053 059
Sony	003 004 013 022 027 044 066 068 082 083 084 085 088 094 096 097 103 113 116 117 118 119 145 146 147 160 168 184 185 186
Soundwave	059
Standard	021 061
Starlite	059 123
Stern	061
Sunkai	051
Sunstar	026 049
Suntronic	026 049
Sunwood	055
Supra	059 126
Symphonic	026 055
Taisho	051 056
Tandberg	061 070
Tansai	149
Tashiko	026 049 059 063 126
Tatung	026 042 049 050 054 060 063 114
TCM	006 043 051 072
Teac	026 060 061
Tec	052 055 058 061
Technics	006 069
Teleavia	050 060
Telefunken	007 009 050 060 077 078 081 132 135 149 150 153 154 161 206
Teletech	055 061
Tenosai	055
Tensai	026 049 053 055 056 059 149
Tevion	006 043 051 072
Thomson	007 009 050 060 065 077 078 098 132 134 138 141 142 143 144 148 152 154 156 157 161 201 204
Thorn	050 059 060 123 154 161 208
Tivo Hdd	065 088
Tokai	053 055 059 060 123 149
Tonsai	055
Toshiba	012 018 035 042 043 045 048 050 054 060 077 080 114 121 154 162 172
Towada	055 183
Towika	055
TVA	052 058
Uher	053 059 126 154
Ultravox	061
Unitech	067 126
United Quick Star	021 061
Universum	026 049 051 053 054 057 059 070 071 076 125 126
Victor	007 078
Video	006 043 051
Wards	155 157
Weltblick	053 059
Yamishi	055
Yokan	055
Yoko	052 053 055 058 059 067 126

SAT/DVR	Manufacturer code
Humax	005
BSkyB	035
Humax	007
TechniSat	347 011
Zehnder	034

Satellite	Manufacturer code
AB Sat	004 056 066 103
AGS	056
Akai	077 001 139
Alba	004 086 095 332 006 036 037 105 106 127 141
Aldes	080 086 003 105 106 107
Allsat	068 076 077 298 003 042 108 139
Allsonic	049 080 088 002 039 106
Alitech	004 097
Alpha	077
Altai	089
Amitronica	004
Ampere	045 089 001 109
Amstrad	004 008 045 050 060 061 079 084 089 098 099 101 165 279 282 292 295 305 313 331 002 038 140
Anglo	004
Ankaro	004 049 078 080 088 286 305 313 331 002 039 106
Antron	076 095 334 002 036 106
Arcon	045 078 337 003 109 110 123
Armstrong	077 001 038

Satellite	Manufacturer code
ASA	090
Asat	077 001 139
ASLF	004
AST	082 288 001 114
Asiacom	056 161
Astra	004 053 071 085 093 288 005 038 111 112 113 133
Astro	020 022 048 049 050 053 088 095 159 004 039 040 106 107
AudioTon	095 002 042 106
Aurora	059
Austar	059 065
Avalon	089
Axiel	056
Axis	049 087 088 093 003 039 113 119
Barcom	305 313 331 001 110
Best	049 088 002 039 110
Blaupunkt	020 022 001 040
Blue Sky	004 061
Boca	004 045 094 160 177 180 192 197 204 207 208 216 223 250 260 269 002 038 133
Boston	045 056
Brain Wave	078 083 001 041
Broadcast	085 001 117
Broco	004 093
BSkyB	008 165
BT	056
BT Satellite	161 001 143
Bubu Sat	004
Bush	068 076 086 005 037 108 118 127 141
BVV	078
Cable	296
Cambridge	050 160 305 313 331
Canal Satellite	048 081 166
Canal+	048 001 142
Channel Master	086 001 105
Chaparral	305 313 322 331 001 136
CHEROKEE	056 066 285
Chess	004 047 052 001 147
CityCom	044 053 057 065 002 037 120 294
Ciatronic	083 001 041
Clearmax	275
Colombia	045
Columbia	045
COLUMBUS	285 001 125
Comag	045
Commander	078
CommLink	080 001 106
Contec	080 087
Condor	049 053 088 001 039
Connexions	049 088 089 001 116
Conrad	044 045 049 050 053 088 094 156
Conrad Electronic	004 053
Contec	087 094 002 119 120
Daewoo	002 004
Dansat	068 076 001 108
D-Box	168
DDC	086 001 105
Dew	087 001 119
Digiality	053
Digipro	062
Discoverer	047 056
Discovery	052
Disecq	056
Distratel	061
Distrisat	077
DNR	078
DNT	077 089 002 116 139
Drake	305 307 313 331 001 123
DSiv	059
Dune	049 088
Dynasat	055
Echostar	004 066 089 166 167 238 241 245 273 274 276 285 290 305 310 313 325 330 331 002 116 147
Einhell	004 045 050 079 080 003 036 038 106
Elap	004 056
Elsat	004 099
Elta	049 077 088 298 332 004 036 039 042 139
EmmeEsse	049 055 088 167 003 039 118 129 312
Engel	004
EURIELT	046 060 061 274
Eurocrypt	071
Europa	050 053 077 078 094
Europhon	045 053

Satellite	Manufacturer code
Eurosat	298 001 038
Eurosky	044 045 049 050 053 088 002 038 039
Eurostar	044 053 055 057 104 001 038
Eutelsat	004
Eutra	097
Exator	095 002 036 106
Fenner	004 047 049 052
Ferguson	068 076 158 327 328 335 336 004 037 043 108 118
Fidelity	050 079 098
Finlandia	071 001 037
Finlux	071 091 156 329 340 003 037 111 126
Flair Mate	004
Foxtel	059 064 065
Fracarro	167 305 313 331 334 001 141
Freecom	022 050 002 036 128
Freesat	060 097
FTE	088 094 160 291 308 337 002 109 130
FTEmaximal	004 049
Fuba	022 044 049 071 088 089 274 285 300 334 009 036 039 040 110 112 116 125 126 139
Fugionkyo	062
Funai	323
Galaxis	044 049 059 065 080 087 088 093 144 289 298 326 008 039 042 106 113 119 127 145 246
Galaxisat	082
Gardiner	057
Glucar Record	305 313 331
Goldbox	048 081 166
Gooding	051
Granada	071 001 111
Grandin	046 069
Grundig	008 020 022 050 051 059 061 074 084 162 164 165 236 237 240 297 305 313 331 006 037 040 106 118 140
G-Sat	076
Hanseatic	052 157 001 135
Hänsel & Gretel	054 053
Hantor	083 003 036 041 132
Hase & Igel	078
Heliocom	053 001 109
Helium	053
Hinari	076 086 001 105
Hirschmann	020 021 022 049 050 053 056 060 089 090 092 153 156 340 002 040 129
Hisawa	083 001 041
HNE	045
Houston	078
Humax	005 007 017 065 144 272 001 045 053 063 078 080 083 085 087 094 007 038 041 042 106 117 119 129
Huth	045 053 063 078 080 083 085 087 094 007 038 041 042 106 117 119 129
Hypson	046 274
ID Digital	065
Imex	046
Ingelen	060
International	045
Interstar	062
Intervision	053 096 001 042
ITT/Nokia	071 090 156 168
JEE-MON	298 305 313 331
Johansson	083 305 313 324 331 001 041
JOK	056 100 161
JVC	051
Kamm	004
Kathrein	003 004 005 010 015 016 020 022 044 056 057 066 077 092 095 159 169 287 288 305 308 313 331 040 120 130 136 139
Kathrein Eurostar	044
Key West	045
Klap	056
Konig	053 329
Kosmos	092 308 003 128 129 130
KR	095 097 001 106
Kreiselmeier	020 022 001 040
K-SAT	004
Kyostar	045 095 001 036
L&S Electronic	045 049
Lasat	044 045 047 049 053 087 088 160 005 039 107 131 132 133
Lemon	078
Lenco	004 044 049 053 078 088 093 334 003 036 128 134
Lenso	050 001 050
Lexus	077
Lifesat	004 045 047 049 052 088 157 005 039 135 145 147 150

Satellite	Manufacturer code
Lorenzen	045 053 078 101
Lupus	049 088 001 039
Luxor	050 071 084 156 168 288 305 306 313 331 001 111
M & B	052 157
Manata	004 045 046 056 161
Manhattan	056 161 298 004 037 042 107 118
Mascom	092 001 107
Maspro	004 020 022 051 070 078 097 162 288 305 313 331 003 037 118 136
Matsui	020 022 051 056 086 161 346 001 143
Max	053
MB	052 157 001 135
Mediabox	048 081 166
Mediasat	048 050 081 093 166 001 113
Medion	004 045 049 088 005 039 135 145 147 150
Medison	004
Mega	077 001 139
Meletronic	057
Memphis	322
Metronic	004 046 057 061 069 080 095 036 106 107 110
Metz	020 022 297 001 040
Micro	004 050 053
Micro electronic	004
Micro Technology	004 093 001 124
Micromax	049 005 039 135 145 147 150
Microtec	004
Minerva	051 297 001 040
MNet	296
Morgan's	004 045 077 094 160 003 038 133 139
Motorola	058
Multichoice	059 001 059
Multistar	308 002 130 132
Multitec	047 001 147
Muratto	082 002 115 128
Mysat	004
Navex	083 001 041
NEC	075 001 137
Network	076
Neuhaus	004 050 053 078 093 094 003 042 113
Neusat	004 078
NextWave	063
Nikko	004 001 038
Nokia	012 013 023 071 090 156 168 176 188 190 196 210 211 214 219 221 224 227 247 249 253 257 268 271 280 281 283 288 340 005 037 111 118 171
Nordmende	083 086 158 333 334 335 336 005 036 037 043 105 107
Nova	059
Novis	083 001 041
Octagon	078 087 095 334 003 036 106 119
Okano	308 003 038 129 130
Odigital	032 072 073
Optex	274 298 002 042 120
Optus	048 059 063
Orbitech	047 048 050 094 154 155 001 036
Osat	084 001 106
Pace	008 027 032 056 066 068 076 163 165 239 240 242 243 277 284 305 313 331 332 006 037 040 108 118 127 140
Packsat	056
Palcom	086 285 305 313 331 004 050 105 112 125
Palladium	050 051 001 038
Palsat	047 050 291
Panasat	054 059
Panasonic	001 008 165 003 037 118 140 022 053 068 071 002 037 108
Panda	045 056
Patriot	045 056
Philips	011 020 022 048 051 056 057 072 073 076 077 078 081 094 095 161 162 164 166 169 235 240 242 004 037 118 139 170
Phoenix	076 087 002 119 127
Phonotrend	080 144 004 037 042 106 129
Pioneer	048 166 315
Predki	083 001 041
Preisner	045 089 094 160
Premier	048
Premiere	048 065 081 166 183 210 211 217 227 271 002 042 142
Profile	056

Appendix

Satellite	Manufacturer code
Prosat	080 086 096 305 313 331 004 105 106 127 141
Prosonic	101
Pye	051
Quadral	049 056 066 080 086 088 094 096 161 311 341 342 343 344 003 039 105 106
Quelle	044 053 079 001 040
Radiola	077 001 139
Radix	009 060 089 097 116 203 213 256 003 172 174
Rainbow	095 097 001 106
Red Star	049 088
Redpoint	093 001 113
Rex	334
RFT	077 078 080 154 002 106 139
RITAR	288
Roadstar	004
Roch	046
Rover	004 049 096
Saba	044 053 056 061 076 078 100 158 161 333 339 004 107 118 124 141
Sagem	102 001 043
Sakura	087 305 313 331 002 119 127
Salora	071 288 306 002 111 137
Samsung	006 019 275 308 314 001 036
SAT	050 082 098 003 105 114 115
Sat Cruiser	063
Sat Partner	050
Sat Team	004
Satcom	052 053 085 157 309 334 002 117 135
Satec	004 076 001 118
Satelco	049 088
Satford	085 001 117
Satline	096
Satmaster	085 001 117
SatPartner	083 006 036 041 106 107 128 129
Satplus	047
Schacke	095
Schneider	047 056 164 004 039 145 147 150
Schwaiger	045 047 052 053 061 076 094 157 006 120 122 135 144 146 246
SCS	044
Sedea Electronique	045 062
Seemann	088 093 003 038 113 116
SEG	049 052 083 088 101 157 184 186 189 199 206 215 225 258 261 263 334 004 036 039 041 135
Seleco	167 334 001 042
Septimo	061
Servi Sat	004 046
Siemens	020 022 160 294 297 001 040
Skantin	004
Skardin	093 001 113
Skinsat	050
SKR	004
SKY	058
Skymaster	004 014 034 047 052 080 096 104 157 182 199 202 205 212 223 229 262 267 003 106 135 147
Skymax	077 001 139
SkySat	004 047 050 052 053 335
SL	045 078
SM Electronic	004 047
Smart	004 044 045 060
Sony	048 244 001 140
SR	045 002 038 133
Starland	004 001 147
Starring	083 001 041
Strong	049 059 062 088 186 187 189 193 198 201 210 216 227 228 248 270 291 299 305 312 313 331 005 036 039 106 128 141
STVI	046 274
Sunny Sound	049 088
Sunsat	004 093
Sunstar	045 049 088 002 038 133
Super Sat	055
Supermax	063
Systec	045
Tandberg	285 001 043
Techniland	085 001 117
TechniSat	347 011 047 048 050 067 077 154 155 173 175 179 181 191 194 195 220 251 259 264 301 302 345 004 116

Satellite	Manufacturer code
Technology	059
Technosat	063
Technowelt	045 053 061
Telanor	285 300 001 105
Telasat	044 052 053 157 001 135
Tele Piu	296
Teleciel	095
Telecom	004
Teledirekt	076
Telefunken	056 161 334 338 003 036 118 143
Teleka	050 053 078 089 092 095 162 003 038 106 116
Telesat	052 053 157 001 135
Telesar	047 048 050 001
Teletech	104
Televess	045 050 002 037 149
Tempo	063
Tensal	303
Tevion	004 005 039 135 145 147 150
Thomson	004 024 026 028 030 031 044 048 053 056 081 158 230 231 232 233 234 242 335 037 043 143
Thorn	305 313 331 003 037 108 118
Tioko	045 001 120
Tokai	077
Tonna	004 050 085 003 037 042 117
Triad	082 003 114 115 128
Triasat	050 091 001 126
Triax	004 044 045 050 091 316 317 318 319 320 002 040
Tristar	291
Turnsat	004
Twinner	004 045 046 001 149
UEC	059 064
Uher	047
Ultravox	298
Uniden	098 278 293 305 313 331 001 138
Unisat	045 077 087 002 038 119
Universum	020 022 044 051 053 090 098 101 001 040
Variosat	020 022
Vega	049
Ventana	077 001 139
Vestel	101
Viasat	066
Visionic	062
Visosat	004 056 100 041 042 147 148
Viva	078
Vivid	064
Vortec	032 321 334 001 036
VTech	057 001 115 082 100 114
Wela	094
Welltech	047
WeTeKom	047 050 052
Winersat	083 305 313 324 331 001 041
Wintergarten	080
WINTERNITZ	279 288
Wisi	020 022 050 053 082 089 094 100 116 178 185 190 191 197 200 209 218 219 220 222 226 252 254 255 256 265 266 318 005 037 040 114 115
World	083
Worldsat	056
Xrypton	049 088
XSat	004 066
Zaunkönig	078
Zehnder	025 044 049 057 082 088 101 304 308 318 005 039 107 110 115 130
Zenith	058
Zinwell	065
Zodiac	095 001 106
Cabletime	305 313 331
Kenwood	305 313 331
Apollo	036
Aston	148
Brandt	143
Clemens Kamphus	129
CNT	107
Comtech	119
Cosat	042
Crown	038
Cybermaxx	150
Daeryung	116
Decca	121
Delega	105
Diamond	122
Diskopress	110
Ditristrad	042
Dong Woo	132

Satellite	Manufacturer code
Elekta	107
Emanon	036
Ep Sat	037
Eurodec	043
Eurospace	124
Finnsat	043 119
France Satellite/TV	125
Galaxi	110
GMI	038
GoldStar	128
Goodmans	037 127
Grothusen	036 128
Hanuri	107
Hitachi	037 118
Houston	042
Imperial	127 141
Innovation	039 135 145 147 150
Intertronic	038
ITT Nokia	037 111 118
JSR	042
Leng	041
Lennox	042
LG	128
Life	145
Lifetec	039 135 145 147 150
Lion	124
Lorraine	128
Lyonnaise	043
Macab	043
Marantz	139
Mediamarkt	038
Microstar	039 135 145 147 150
Mitsubishi	037 040 143
Mitsumi	133
Morgan Sydney	149
Next Wave	146
Nomex	151
Oceanic	122 124
Orbit	114
Origo	124
Otto Versand	040
Pacific	122
Paltec	112
Polsat	043
Polytron	120
Priesner	038
Profi	134
Promax	037
Protek	122
Provision	107
Quiero	043
Rediffusion	137
Redstar	039
Ruefach	134
Sabre	037
Silva	128
Sky Digital	140
Skyvision	042
Start Trak	036
Sumida	038
Tandy	106
Tantec	037 050 118 125
Tatung	121
TCM	039 135 145 147 150
Teco	038 133
Telemaster	107
Telexmax	131
Telewire	042
Thorens	122
TPS	102
Unitor	041 110
Variostat	040
Vector	124
Via Digital	024
Vivanco	152
Wevasat	037
Wewa	037
Woorisat	107

Satellite Receiver	Manufacturer code
Hauppauge	018 029

Satellite Receiver/Recorder	Manufacturer code
Humax	005
Kathrein	033

Cable Box	Manufacturer code
ABC	375
Alcatel	373 374
Amstrad	378 380
Arcon	380
Axis	380
Cabletime	348 349 350 366 368 370

Cable Box	Manufacturer code
Clyde Cablevision	351
Comcrypt	376
Cryptovision	352
Fidelity	380
Filmmet	376
Filmmet Cablecrypt	353 369
Filmmet Comcrypt	353
Finlux	355
Foxtel	378
France Telecom	371 372 377
Freebox	379
GEC	351
General Instrument	367 375
Gooding	354
Grundig	380 354
Hirschmann	355
ITT Nokia	355
Jerrold	356 362 364 367 375
JVC	354
Macab	372 377
Maspro	354
Matsui	354
Minerva	354
Mnet	369 376
Movie Time	361
Mr Zapp	377
Multichoice	376
Nokia	355
Noos	377
Palladium	354
Philips	354 363 371 372 377
Pioneer	380 357 358
PVP Stereo Visual	364
Matrix	
Sagem	372 377
SAT	380
Scientific Atlanta	359 360
Starcom	375
Tele+1	353 369 376
Telepiu	369 376
Torx	375
United Cable	364
Universon	354 355
Videoway	365
Visiopass	355 371 372 377
Wittenberg	380

SAT/DVD	Manufacturer code
Humax	005 (SAT)/048 (DVD)

Appendix

PC compatibility chart

Resolution		Horizontal Frequency	Vertical Frequency	VESA Standard
VGA	640 × 480	31.5 kHz	60 Hz	✓
SVGA	800 × 600	37.9 kHz	60 Hz	✓
XGA	1024 × 768	48.4 kHz	60 Hz	✓
WXGA	1360 × 768	47.7 kHz	60 Hz	✓
SXGA	1280 × 1024	64.0 kHz	60 Hz	✓

VGA, SVGA, XGA, WXGA and SXGA are registered trademarks of International Business Machines Co., Inc.

NOTE

- This TV has only limited PC compatibility, correct operation can only be guaranteed if the video card conforms exactly to the VESA 60Hz standard. Any variations from this standard will result in picture distortions.


RS-232C port specifications

PC Control of the TV

- When a program is set, the TV can be controlled from the PC using the RS-232C terminal. The input signal (PC/video) can be selected, the volume can be adjusted and various other adjustments and settings can be made, enabling automatic programmed playing.
- Attach an RS-232C cable cross-type (commercially available) to a 9 pin D-sub/MINI-DIN (optional: AN-A1RS) for the connections.

NOTE

- This operation system should be used by a person who is accustomed to using PCs.

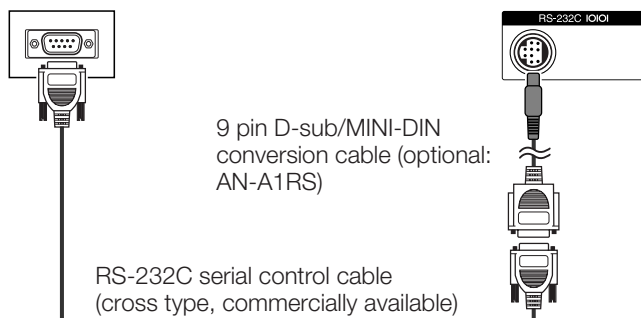

Communication conditions

Set the RS-232C communications settings on the PC to match the TV's communications conditions. The TV's communications settings are as follows:

Baud rate:	9,600 bps
Data length:	8 bits
Parity bit:	None
Stop bit:	1 bit
Flow control:	None

Communication procedure

Send the control commands from the PC via the RS-232C connector.

The TV operates according to the received command and sends a response message to the PC.

Do not send multiple commands at the same time. Wait until the PC receives the OK response before sending the next command.

Make sure to send "A" with the carriage return and confirm that "ERR" returns before operating.

Command format

Eight ASCII codes + CR

C1	C2	C3	C4	P1	P2	P3	P4	↵
----	----	----	----	----	----	----	----	---

Command 4-digits

Parameter 4-digits

Return code

Command 4-digits: Command. The text of four characters.

Parameter 4-digits: Parameter 0 – 9, blank, ?

Parameter

Input the parameter values, aligning left, and fill with blank(s) for the remainder. (Be sure that four values are input for the parameter.)

When the input parameter is not within an adjustable range, "ERR" returns. (Refer to "Response code format".)

0			
---	--	--	--

0	0	0	9
---	---	---	---

-	3	0	
---	---	---	--

1	0	0	
---	---	---	--

0	0	5	5
---	---	---	---

When "?" is input for some commands, the present setting value responds.

?			
---	--	--	--

?	?	?	?
---	---	---	---

Response code format

Normal response

O	K	↵
---	---	---

Return code (0DH)

Problem response (communication error or incorrect command)

E	R	R	↵
---	---	---	---

Return code (0DH)

After sending the return code (0DH), make sure to send line feed (0AH) as well.

Appendix

Commands

CONTROL ITEM	COMMAND	PARAMETER	CONTROL CONTENTS	CONTROL ITEM	COMMAND	PARAMETER	CONTROL CONTENTS
POWER SETTING	P O W R	0 _ _ _	POWER OFF	GEOMETRY	H P O S	* * * _	H-POSITION AV (– 10 – +10) PC (0 – 80)
INPUT SELECTION A	I T V D	_ _ _ _	TV (CHANNEL FIXED)		H P O S	? ? ? ?	AV (– 10 – +10) PC (0 – 80)
	I D T V	_ _ _ _	DTV (CHANNEL FIXED)		V P O S	* * * _	V-POSITION AV (– 10 – +10) PC (0 – 40)
	I A V D	* _ _ _	EXT1 – 6 (1 – 6)		V P O S	? ? ? ?	AV (– 10 – +10) PC (0 – 40)
	I A V D	? ? ? ?	1 to 6, 0 (TV/DTV)		P H S E	* * * _	PHASE PC (– 20 – +20)
CHANNEL	D C C H	* * * _	TV DIRECT CHANNEL (0 – 998)		P H S E	? ? ? ?	PC (– 20 – +20)
	D C C H	? ? ? ?	0 to 998	WIDE MODE	W I D E	0 _ _ _	WIDE MODE (Toggle)
	C H U P	_ _ _ _	CHANNEL UP		W I D E	1 _ _ _	FULL (SD)
	C H D W	_ _ _ _	CHANNEL DOWN		W I D E	2 _ _ _	NORMAL (SD)
	D T V D	* * * _	DTV DIRECT CHANNEL (1 to 999)		W I D E	3 _ _ _	PANORAMA (SD)
	D T V D	? ? ? ?	1 to 999		W I D E	4 _ _ _	CINEMA 16:9 (SD)
	D T U P	_ _ _ _	DTV CHANNEL UP		W I D E	5 _ _ _	CINEMA 14:9 (SD)
	D T D W	_ _ _ _	DTV CHANNEL DOWN		W I D E	6 _ _ _	FULL (HD)
INPUT SELECTION B	I N P 1	0 _ _ _	EXT1 (Y/C)		W I D E	7 _ _ _	UNDERSCAN (HD)
	I N P 1	1 _ _ _	EXT1 (CVBS)		W I D E	8 _ _ _	FULL (PC)
	I N P 1	2 _ _ _	EXT1 (RGB)		W I D E	9 _ _ _	NORMAL (PC)
	I N P 1	? ? ? ?	0 to 2		W I D E	? ? ? ?	1 to 9
	I N P 2	0 _ _ _	EXT2 (Y/C)	MUTE	M U T E	0 _ _ _	MUTE (Toggle)
	I N P 2	1 _ _ _	EXT2 (CVBS)		M U T E	1 _ _ _	MUTE ON
	I N P 2	? ? ? ?	0 to 1		M U T E	2 _ _ _	MUTE OFF
	I N P 3	0 _ _ _	EXT3		M U T E	? ? ? ?	1 to 2
	I N P 4	0 _ _ _	EXT4 (RGB)	SURROUND	A C S U	0 _ _ _	SURROUND (Toggle)
	I N P 4	1 _ _ _	EXT4 (COMPONENT)		A C S U	1 _ _ _	SURROUND ON
	I N P 4	? ? ? ?	0 to 1		A C S U	2 _ _ _	SURROUND OFF
	I N P 5	0 _ _ _	EXT5 (HDMI)		A C S U	? ? ? ?	1 to 2
	I N P 6	0 _ _ _	EXT6 (HDMI)	AUDIO CHANGE	A C H A	_ _ _ _	SOUND SELECT (ST/Bilingual/mono)
	A V M D	0 _ _ _	AV MODE SELECTION	SLEEP TIMER	O F T M	0 _ _ _	OFF
	A V M D	1 _ _ _	STANDARD		O F T M	1 _ _ _	30 m
	A V M D	2 _ _ _	SOFT		O F T M	2 _ _ _	1 h 00 m
	A V M D	3 _ _ _	ECO		O F T M	3 _ _ _	1 h 30 m
	A V M D	4 _ _ _	DYNAMIC		O F T M	4 _ _ _	2 h 00 m
	A V M D	5 _ _ _	USER		O F T M	5 _ _ _	2 h 30 m
	A V M D	? ? ? ?	1 to 5		O F T M	? ? ? ?	0 to 150
VOLUME	V O L M	* * _ _	VOLUME (0 – 63)	TEXT	T E X T	0 _ _ _	TEXT OFF
	V O L M	? ? ? ?	0 to 63		T E X T	1 _ _ _	TEXT CHANGE
					T E X T	? ? ? ?	0 to 1
					D C P G	* * * _	DIRECT PAGE JUMP (100 – 899)
					D C P G	? ? ? ?	100 to 899

NOTE

- If an underbar (_) appears in the parameter column, enter a space.
- If an asterisk (*) appears, enter a value in the range indicated in brackets under CONTROL CONTENTS.

Rating table for Child Lock

Broadcasted rating User-adjusted rating	AGE															
	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	
Universal	✓	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
Parental	✓	✓	✓	✓	✓	—	—	—	—	—	—	—	—	—	—	—
X-rated	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓

Broadcasted rating User-adjusted rating	Universal				Parental				X-rated			
Universal	—				—				—			
Parental	✓				—				—			
X-rated	✓				✓				—			

Specifications

Item			46" LCD COLOUR TV, Model: LC-46XL1E, LC-46XL1S	52" LCD COLOUR TV, Model: LC-52XL1E, LC-52XL1S
LCD panel			46" Advanced Super View & BLACK TFT LCD	52" Advanced Super View & BLACK TFT LCD
Number of dots			6,220,800 dots (1920 × 1080 × 3 dots)	
Video Colour System			PAL/SECAM/NTSC 3.58/NTSC 4.43/PAL 60	
TV Function	TV- Standard	Analogue	CCIR (B/G, I, D/K, L, L')	
		Digital	DVB-T (2K/8K OFDM)	
	Receiving Channel	VHF/UHF	E2–E69ch, F2–F10ch, I21–I69ch, IR A–IR Jch, (Digital: E5-E69ch)	
		CATV	Hyper-band, S1–S41ch	
	TV-Tuning System		Auto Preset 999 ch, Auto Label, Auto Sort	
	STEREO/BILINGUAL		NICAM/A2	
Brightness			450 cd/m ²	
Backlight life			60,000 hours (at Backlight Standard position)	
Viewing angles			H : 176° V : 176°	
Audio amplifier			15W × 2	
Speaker			(100 mm × 40 mm) × 4	
Terminals	Rear	Antenna input	UHF/VHF 75 Ω Din type (Analogue & Digital)	
		RS-232C	9 pin MINI-DIN male connector	
		EXT 1	SCART (AV input, Y/C input, RGB input, TV output)	
		EXT 2	SCART (AV input/monitor output, Y/C input, AV Link)	
		EXT 3	S-VIDEO (Y/C input), RCA pin (AV input)	
		EXT 4	Ø 3.5 mm jack (Audio input), 15 pin mini D-sub (PC/Component)	
		EXT 5	HDMI, Ø 3.5 mm jack (Audio input)	
		EXT 6	HDMI	
		C. I. (Common Interface)	EN50221, R206001	
		OUTPUT	RCA pin (Audio)	
Headphones		Ø 3.5mm jack (Audio output)		
OSD language			English/German/French/Italian/Spanish/Dutch/Swedish/Portuguese/Finnish/ Turkish/Greek/Russian/Polish	
Power Requirement			AC 220–240 V, 50 Hz	
Power Consumption			275 W (2.7 W Standby) (Method IEC60107)	305 W (2.7 W Standby) (Method IEC60107)
Weight			31.7 kg (Without stand), 36.2 kg (With stand)	37.2 kg (Without stand), 41.8 kg (With stand)
Operating temperature			0°C to +40°C	

- As a part of policy of continuous improvement, SHARP reserves the right to make design and specification changes for product improvement without prior notice. The performance specification figures indicated are nominal values of production units. There may be some deviations from these values in individual units.

NOTE

- Refer to inside back cover for dimensional drawings.

Optional accessories

The listed optional accessories are available for the LCD colour TV. Please purchase them at your nearest shop.

- Additional optional accessories may be available in near future. When purchasing, please read the newest catalogue for compatibility and check the availability.

No.	Part name	Part number
1	Wall mount bracket LC-46XL1E, LC-46XL1S, LC-52XL1E, LC-52XL1S	AN-52AG1
2	9 pin D-sub/MINI-DIN conversion cable	AN-A1RS

A. Information on Disposal for Users (private households)



Attention: Your product is marked with this symbol. It means that used electrical and electronic products should not be mixed with general household waste. There is a separate collection system for these products.

1. In the European Union

Attention: If you want to dispose of this equipment, please do not use the ordinary dust bin!

Used electrical and electronic equipment must be treated separately and in accordance with legislation that requires proper treatment, recovery and recycling of used electrical and electronic equipment.

Following the implementation by member states, private households within the EU states may return their used electrical and electronic equipment to designated collection facilities free of charge*. In some countries* your local retailer may also take back your old product free of charge if you purchase a similar new one.

*) Please contact your local authority for further details.

If your used electrical or electronic equipment has batteries or accumulators, please dispose of these separately beforehand according to local requirements.

By disposing of this product correctly you will help ensure that the waste undergoes the necessary treatment, recovery and recycling and thus prevent potential negative effects on the environment and human health which could otherwise arise due to inappropriate waste handling.

2. In other Countries outside the EU

If you wish to discard this product, please contact your local authorities and ask for the correct method of disposal.

For Switzerland: Used electrical or electronic equipment can be returned free of charge to the dealer, even if you don't purchase a new product. Further collection facilities are listed on the homepage of www.swico.ch or www.sens.ch.

B. Information on Disposal for Business Users

1. In the European Union

If the product is used for business purposes and you want to discard it:

Please contact your SHARP dealer who will inform you about the take-back of the product. You might be charged for the costs arising from take-back and recycling. Small products (and small amounts) might be taken back by your local collection facilities.

For Spain: Please contact the established collection system or your local authority for take-back of your used products.


2. In other Countries outside the EU

If you wish to discard of this product, please contact your local authorities and ask for the correct method of disposal.

(): LC-46XL1E
LC-46XL1S

[]: LC-52XL1E
LC-52XL1S

■ : LC-46XL1E
LC-46XL1S
LC-52XL1E
LC-52XL1S

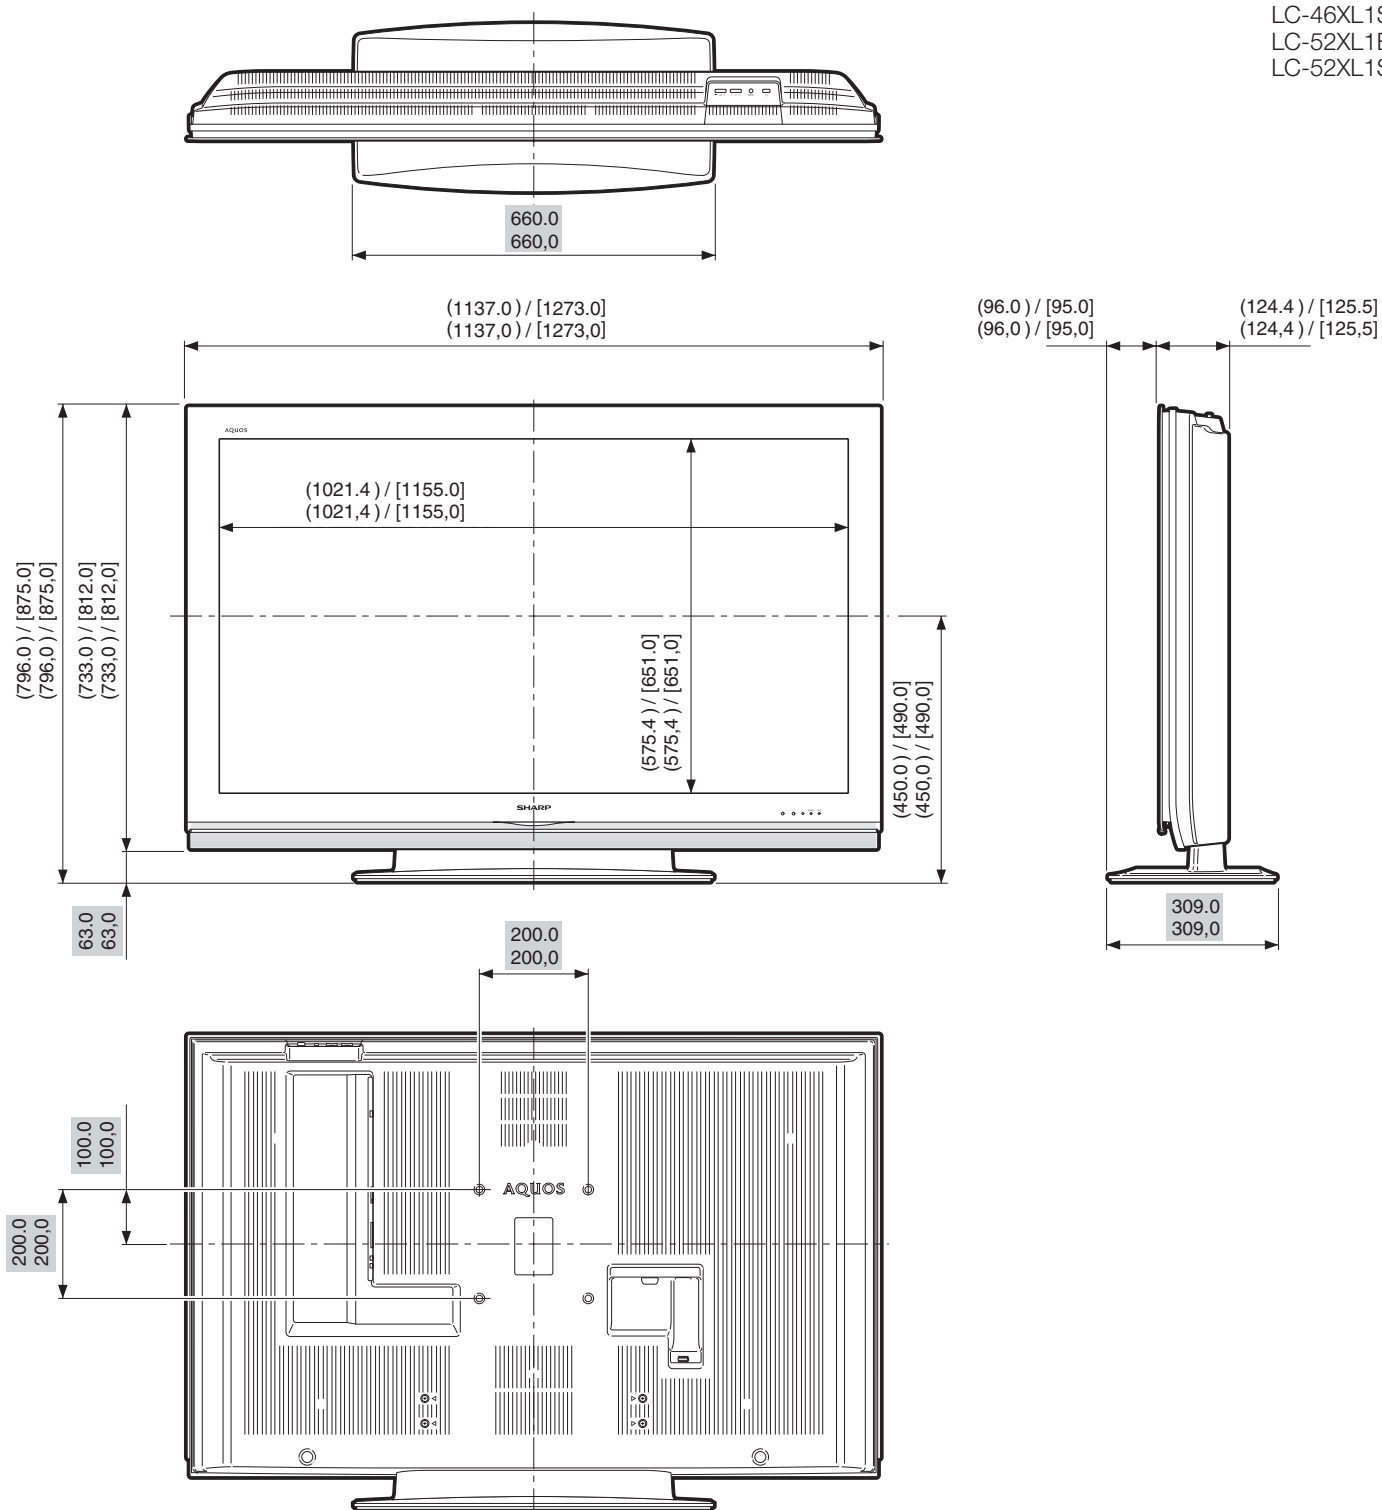

SHARP®

SHARP CORPORATION

SHARP ELECTRÓNICA ESPAÑA S.A.

Polígono Industrial Can Sant Joan

Calle Sena s/n

08174 SANT CUGAT DEL VALLÉS

BARCELONA (ESPAÑA)

Printed on environmentally friendly paper
Auf ökologischem Papier gedruckt
Imprimé sur papier écologique
Stampato su carta ecologica
Afgedrukt op ecologisch papier
Impreso en papel ecológico



Printed in Spain
Gedruckt in Spanien
Imprimé en Espagne
Stampato in Spagna
Gedruckt in Spanje
Impreso en España

TINS-D104WJZZ
07P05-SP-NG

PIN

--	--	--	--